AUSTRALIAN EDITION

Modern Knitting

NOV./DEC. 1964

2/9

A Knitmaster PUBLICATION

Where you can see and buy
THE FABULOUS NEW KNITMASTER TWINMATIC

Eve Willson,
161 Bowes Road,
London, N.11.
(*Telephone:* Bowes Park 7091)

Clayes Home Knitting Centre,
Moorfields,
Shalesmoor, Sheffield, 3.
(*Telephone:* Sheffield 25396)

Knitting Machine Centre (Birmingham),
11 Moat Row,
Birmingham, 5.
(*Telephone:* Midland 7624)

Letsalknit Ltd.,
Romford Knitting Centre,
138 North Street, Romford, Essex
(*Telephone:* Romford 63022)

Sherwood Sewing Machines (N.I.) Ltd.,
135 Royal Avenue,
Belfast, 1.
(*Telephone:* Belfast 30441)
and
2a Pakenham Street,
Belfast, 7.
(*Telephone:* Belfast 21885/6)

Sew-Knit Centre,
73 Church Street,
Preston, Lancs.
(*Telephone:* Preston 54558)

Sew-Knit Centre,
6 Damside Street,
Lancaster.
(*Telephone:* Lancaster 64436)

Hal Ainsworth,
47a Newbold Road,
Chesterfield.
(*Telephone:* Chesterfield 75199)

Tysons Sewing Machines Ltd.,
1 Staines Road,
Hounslow, Middlesex.
(*Telephone:* Hounslow 6790)

303 High Road,
Chiswick, W.4.
(*Telephone:* Chiswick 9074)

4 High Street,
Southall, Middlesex.
(*Telephone:* Southall 1587)

149 Uxbridge Road,
West Ealing, W.13.
(*Telephone:* Ealing 2320)

57 Eden Street,
Kingston-on-Thames.
(*Telephone:* Kingston 8029)

Severn Sewing Machines,
318 Gloucester Road,
Horfield, Bristol, 7.
(*Telephone:* Bristol 44277)

S. G. Fox (Sewing Machines) Ltd.,
4 Broad Street,
Nottingham.
(*Telephone:* Nottingham 46974)

60 Babington Lane,
Derby.
(*Telephone:* Derby 47941)

56/58 Clumber Street,
Mansfield.
(*Telephone:* Mansfield 2866)

D. E. Nightingale,
Room 9.
Fieldsend Chambers,
Low Pavement, Chesterfield,
Derbys.
(*Telephone:* Chesterfield 75572)

Revie Sewing Machines,
Grand Arcade, Leeds, 1.
(*Telephone:* Leeds 34109)
and
3 The Springs, Wakefield.
(*Telephone:* Wakefield 71283)

Bradford Knitting Centre,
36 Church Bank,
Bradford.
(*Telephone:* Bradford 21858)

Also available at all Co-operative Stores throughout the British Isles.

In most cases Home Demonstrations gladly arranged

This month

CONTENTS

Page	SINGLE BED PATTERNS
4–5	Man's chunky knit lumber jacket.
6–7	Baby's Double Knitting matinee jacket.
10–11	Girl's or boy's vee neck cardigan.
12–13	Lady's four piece check suit.
16–17	Child's Ribmaster sweater.
20–21	Man's Brioche rib sweater.
24–25	Large woman's suit.
Cover:	Instructions for our cover set are on pages 8–9.
	DOUBLE BED PATTERNS
28–29	Man's 3-ply pullover
30–31	Man's 4-ply pullover.
32–33	Lady's party dress.
	SPECIAL FEATURES
18–19	Christmas shopping.
23	New Twinmatic leaflets.
34	Wool manufactures.

. . next month

Children's and lady's bed jackets, teenager's jumper and overblouse, lady's party dress and a man's Double Crepe lumber jacket.

From your Editor's Chair

WE are now well into our "knitting season" with everyone knitting for Christmas as well as the extra woollies needed to keep out the winter cold.

I am sure you will all be as pleased as we are with the cover set which is in Listers Lavenda Double Six and the man's lumber jacket in Robin Rythm Chunky knit. Both these garments are in chunky wools which is another Knitmaster achievement. Up to now we have only featured designs in Double Knitting wools. We are hoping to broaden our outlook in the field of more chunky wools during the coming months.

At this stage I would like to mention why we are no longer quoting 2-ply wool in our patterns. As you are no doubt aware, the popular trend does not call for the use of finer wools, therefore most of the well-known manufacturers have withdrawn 2-ply wool from the market. There is little point, therefore, in designing patterns for this ply of wool if our readers are unable to buy it locally.

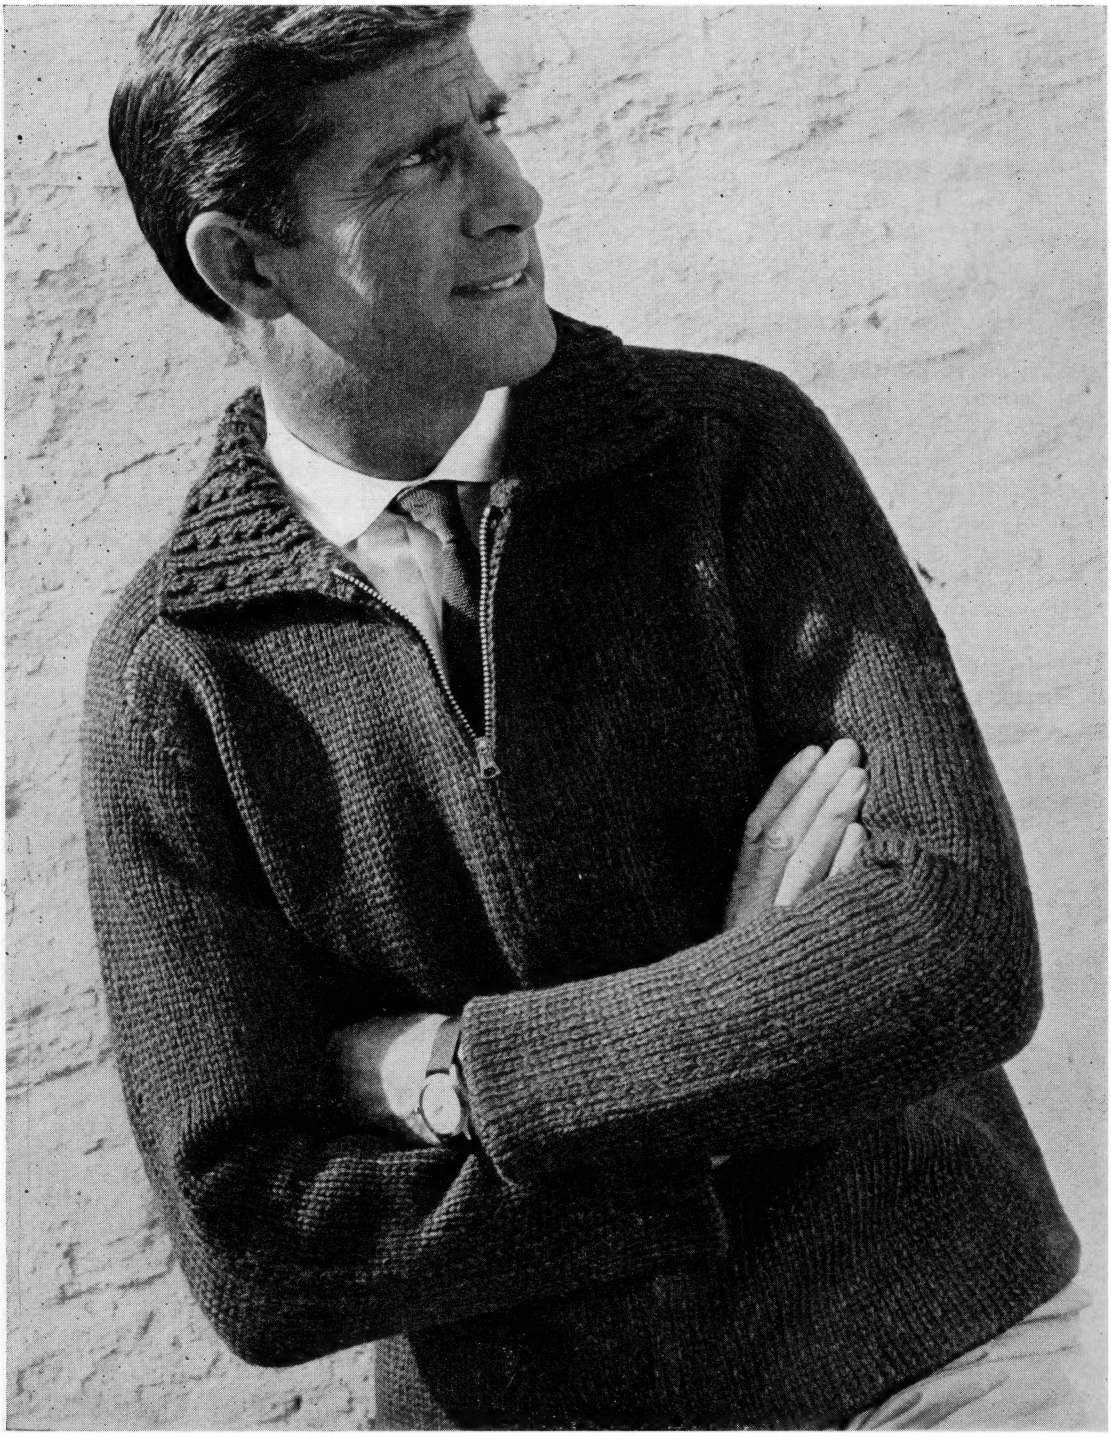

COLD WEATHER SPECIAL

First 3 sizes for Knitmasters with 135 Needles or more; remaining sizes for Knitmasters with 168 Needles or more.

MATERIALS: 15 (16, 17, 17, 18, 20, 21) 2 oz. balls Robin Rhythm Chunky Knit; 22-inch Lightning open-end zip fastener; 2½ (2½, 2¾, 2¾, 2¾, 2¾, 3) yd. 1-inch wide bias binding in matching colour.

MEASUREMENTS: To fit a 36 (38, 40, 42, 44, 46, 48) inch chest (actual garment measures 40 (42, 44, 46, 48, 50, 52) inches); completed length at centre back without collar, 25 (25, 25½, 25½, 26, 26, 26½) inches; completed sleeve seam, 17½ (18, 18, 18½, 18½, 19, 19) inches (adjustable).

TENSION: 4 stitches and 5 rows to 1 inch, measured over stocking stitch on every 3rd Needle only.

ABBREVIATIONS: N.W.P., Non-Working Position.

NOTES: Figures in brackets refer to the larger sizes respectively.
Do not count Needles in N.W.P. as stitches.
When increasing, increase on every 3rd Needle.
It will be necessary to give each piece a good downwards tug after it comes off the machine.

BACK (2 pieces)
Left Half. Cast on 41 (43, 45, 47, 49, 51, 53) stitches *on every 3rd Needle only*. Change to Tension 9 and knit 80 rows without shaping (knit 1 row extra for Right Half only). (Cam Box is at right.)
Shape armhole. Cast off 2 (3, 4, 5, 5, 6, 7) stitches at beginning of next row; knit 1 row. Decrease 1 stitch at beginning of the next and every following 4th row 9 (9, 9, 9, 10, 10, 10) times altogether (30 (31, 32, 33, 34, 35, 36) stitches remain). Knit 5 (5, 7, 7, 7, 7, 9) rows without shaping. (Cam Box is at right.)
Shape shoulder. Cast off 5 stitches at beginning of the next and every following alternate row 3 times altogether; knit 1 row. Cast off 4 (4, 5, 5, 6, 6, 7) stitches at beginning of next row (knit 1 row extra for Left Half only). Cast off remaining 11 (12, 12, 13, 13, 14, 14) stitches.
Right Half. Follow instructions for left half but reverse the shapings by noting alterations in number of rows worked and reading left for right.

RIGHT FRONT
Cast on 41 (43, 45, 47, 49, 51, 53) stitches *on every 3rd Needle only*. Change to Tension 9 and knit 80 rows without shaping (knit 1 row extra for Left Front only). (Cam Box is at right.)
Shape armhole. Cast off 2 (3, 4, 5, 5, 6, 7) stitches at beginning of next row; knit 1 row. Decrease 1 stitch at beginning of the next and every following 4th row 9 (9, 9, 9, 10, 10, 10) times altogether (30 (31, 32, 33, 34, 35, 36) stitches remain). Knit 2 (2, 2, 2, 0, 0, 0) rows without shaping. (Cam Box is at left.)
Shape neck. Cast off 6 (7, 6, 7, 6, 7, 6) stitches at beginning of next row; knit 1 row.
1st and 2nd sizes only. Cast off 3 stitches at beginning of next row.
3rd, 4th, 5th, 6th and 7th sizes only. Cast off 2 stitches at beginning of the next and every following alternate row (2, 2, 3, 3, 4) times altogether.
All sizes. (21 (21, 22, 22, 22, 22, 22) stitches remain.) (Cam Box is at right.)
Shape shoulder. Cast off 7 stitches at beginning of next row 2 (2, 2, 2, 1, 1, 0) stitches at beginning of next row and 7 stitches at beginning of next row. (Knit 1 row extra for Right Front only.) Cast off remaining 5 (5, 6, 6, 7, 7, 8) stitches.

LEFT FRONT
Follow instructions for Right Front but reverse the shapings by noting alterations in number of rows worked and reading left for right and vice versa.

SLEEVES (both alike) (2 pieces)
First Half. Cast on 21 (21, 22, 22, 23, 23, 24) stitches *on every 3rd Needle only*. Change to Tension 9 and knit 14 rows without shaping (knit 1 row extra for second half only). (Cam Box is at right.)
Increase 1 stitch at beginning of the next and every following 6th row 11 (12, 12, 13, 13, 14, 14) times altogether (32 (33, 34, 35, 36, 37, 38) stitches). Knit 15 (11, 11, 9, 9, 5, 5) rows without shaping. (Adjust length at this stage, if desired.) (Cam Box must be at right.)
Shape top. Cast off 2 (3, 4, 5, 5, 6, 7) stitches at beginning of next row; knit 1 row. Decrease 1 stitch at beginning of the next and every following alternate row 3 (3, 6, 6, 7, 7, 10) times altogether. (Knit 1 row extra for First Half only.) *Knit 1 row. Decrease 1 stitch at right edge of next 3 rows*. Repeat the last 4 rows, from * to *, 5 (5, 4, 4, 4, 4, 3) more times (9 stitches remain). Knit 24 (24, 25, 25, 26, 26, 28) rows without shaping. Cast off.
Second Half. Follow instructions for first half but reverse the shapings by noting alterations in number of rows worked and reading left for right.

COLLAR (2 pieces)
Right Half. Cast on 42 (42, 42, 47, 47, 47, 52) stitches *on every 3rd Needle only*. Change to Tension 9. *Knit 4 rows. Counting from the left, cross stitch 4 with stitch 5 and every following 4th stitch with the 5th stitch.* Repeat the last 4 rows, from * to *, 4 more times. Knit 4 rows. Counting from the left, drop the 3rd and 6th and every following 2nd and 5th stitches and pick up as for ribbing. Cast off.
Left Half. Follow instructions for right half but read right for left.

Continued on page 23

BABY'S TREASURE

For Knitmasters with 135 Needles or more.

MATERIALS: 5 (6, 7) oz. Sirdar Baby Double Knitting wool; 1 small button; stitch holder.

MEASUREMENTS: To fit a 16 (18, 20) inch chest (actual garment measures 18 (20, 22) inches); length at centre back without neckborder, $9\frac{3}{4}$ ($10\frac{3}{4}$, $11\frac{3}{4}$) inches; sleeve seam, 5 ($5\frac{3}{4}$, $6\frac{1}{2}$) inches (adjustable).

TENSION: 13 stitches and 16 rows to 2 inches, measured over stocking stitch.

ABBREVIATION: W.P., Working Position.

NOTES: Figures in brackets refer to the larger sizes respectively.
The decreasings at raglan edges should be worked 2 stitches in by transferring the 3rd stitch on to the 4th Needle and moving the 2 end stitches 1 Needle in.

BACK
Cast on 99 (113, 127) stitches. **Change to Tension 7 and knit 2 rows. Counting from the right, transfer the 2nd and every following alternate stitch on to its adjacent Needle at left. With all Needles in W.P. and all Latches open, knit 2 rows. Counting from the right, transfer the 3rd and every following alternate stitch on to its adjacent Needle at left. With all Needles in W.P. and all Latches open, knit 2 rows. Turn up a hem and, with loops from cast on edge behind the Latches, knit 1 row. Change to Tension 8 and knit 1 row.
Counting from the right edge and starting on Stitch 1 of Chart, knit Rows 1 to 20 inclusive then, repeat Rows 19 and 20 9 (11, 13) more times (46 (50, 54) rows from beginning). Slip stitches on to a stitch holder.** Push up 59 (66, 73) Needles into W.P. With purl side facing, replace stitches from stitch holder back on to these Needles as follows:—
1st size only. 2 stitches together on to each of the first 2 Needles,* 1 stitch on to the next Needle and 2 stitches together on to each of the next 2 Needles*. Repeat from * to * all along the row.
2nd size only. 2 stitches together on to each of the first 6 Needles,* 1 stitch on to the next Needle and 2 stitches together on to each of the next 2 Needles*. Repeat from * to * all along the row, ending with 2 stitches together on each of the last 3 Needles.
3rd size only. 1 stitch on to the first Needle,* 2 stitches together on to each of the next 3 Needles and 1 stitch on to the next Needle*. Repeat from * to * all along the row.
All sizes. Change to Tension 7 and knit 4 rows. Drop every alternate stitch 3 rows down and pick up as for ribbing. Change to Tension 8 and knit 4 rows without shaping.
Shape raglan armholes. Cast off 4 stitches at beginning of next 2 rows, 2 stitches at beginning of next 2 (4, 6) rows and decrease 1 stitch (2 stitches in) at beginning of next 24 (26, 28) rows. Cast off remaining 23 (24, 25) stitches.

RIGHT FRONT
Cast on 43 (57, 71) stitches. Now follow instructions for Back from ** to **. Push up 29 (32, 35) Needles into W.P. With purl side facing, replace stitches from stitch holder back on to these Needles as follows:—
1st size only. 1 stitch on to the first Needle, *2 stitches together on to the next Needle and 1 stitch on to the next Needle*. Repeat from * to * all along the row.
2nd size only. 2 stitches together on to each of the first 4 Needles, *1 stitch on to the next Needle and 2 stitches together on to each of the next 3 Needles*. Repeat from * to * all along the row.
3rd size only. 3 stitches together on to the first Needle then 2 stitches together on to remaining Needles.
All sizes. Change to Tension 7 and knit 4 rows. Drop every alternate stitch 3 rows down and pick up as for ribbing. Change to Tension 8 and knit 4 rows without shaping (knit 1 row extra for Left Front only).
Shape front edge and raglan armhole. Decreasing 1 stitch at front edge on the 2nd and every following 3rd (3rd, 4th) row 9 times altogether, *at the same time*, cast off 4 stitches at beginning of next row; knit 1 row.
1st size only. Cast off 2 stitches at beginning of next row; knit 1 row.
2nd and 3rd sizes only. Cast off 2 stitches at beginning of the next and every following alternate row (2, 3) times altogether; knit 1 row.
All sizes. Decrease 1 stitch (2 stitches in) at beginning of the next and every following alternate row 12 (13, 14) times altogether; knit 1 row. Fasten off remaining 2 stitches.

LEFT FRONT
Follow instructions for Right Front but reverse the shapings by noting alteration in number of rows worked.

SLEEVES (both alike)
Cast on 33 (35, 37) stitches. Change to Tension 7 and knit 2 rows. Counting from the right, transfer the 2nd and every following alternate stitch on to its adjacent Needle at left. With all Needles in W.P. and all Latches open, knit 2 rows. Counting from the right, transfer the 3rd and every following alternate stitch on to its

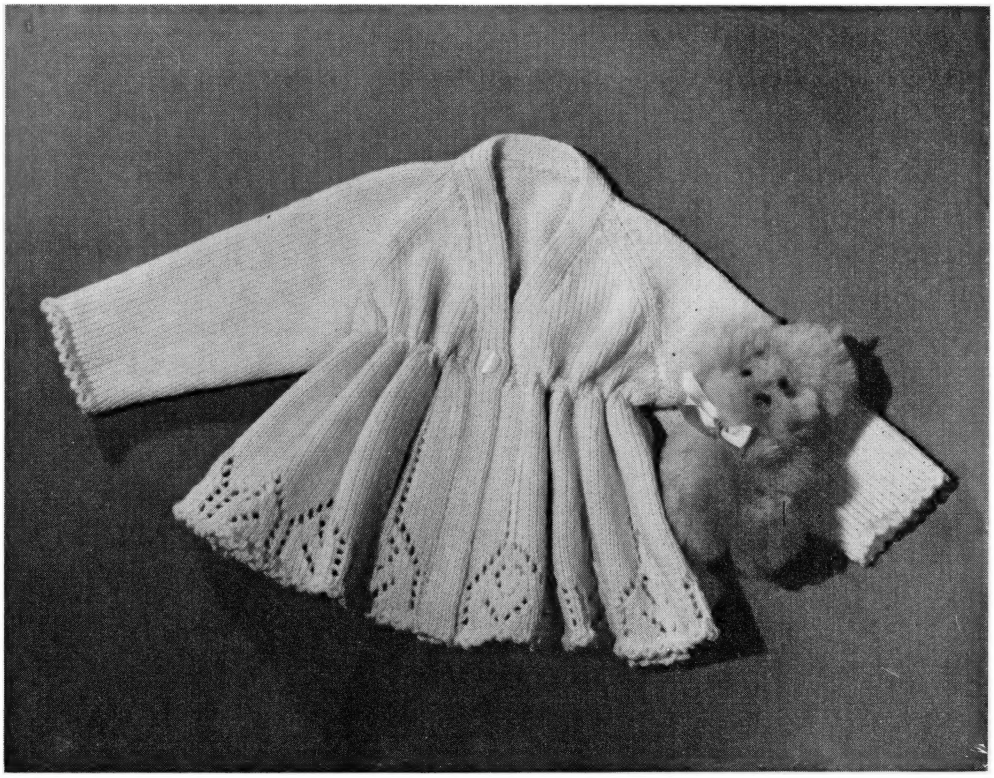

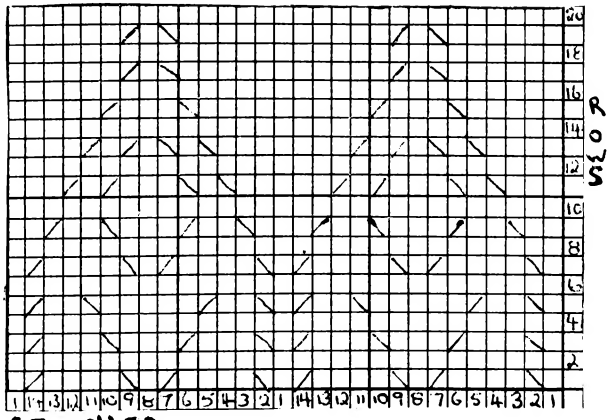

KEY

☑ Transfer stitch to its adjacent Needle at right (push empty Needle into W.P.).

☒ Transfer stitch to its adjacent Needle at left (push empty Needle into W.P.).

adjacent Needle at left. With all Needles in W.P. and all Latches open, knit 2 rows. Turn up a hem and, with loops from cast on edge behind the Latches, knit 1 row. Change to Tension 8 and knit 1 row. Increase 1 stitch at beginning of the next 2 rows and every following 7th and 8th (5th and 6th, 5th and 6th) rows 4 (6, 8) times altogether (41 (47, 53) stitches). Knit 10 (10, 4) rows without shaping (44 (50, 56) rows from beginning). (Adjust length at this stage, if desired.)

Shape raglan top. Cast off 4 stitches at beginning of next 2 rows, 2 stitches at beginning of next 2 (4, 6) rows and decrease 1 stitch (2 stitches in) at beginning of next 24 (26, 28) rows. Cast off remaining 5 stitches.

FRONT BORDER

Cast on 9 stitches. Change to Tension 7 and, dropping every alternate stitch at convenient intervals and picking up as for ribbing, knit 45 (49, 53) rows. Make a buttonhole by transferring the centre stitch on to its adjacent Needle and leave empty Needle in W.P. Dropping every alternate stitch at convenient intervals and picking up as for ribbing, knit until long enough to go along both front edges, across tops of sleeves and across back of neck. Cast off in rib by hand.

TO MAKE UP

Press each piece carefully with a hot iron over a damp cloth, keeping fullness in skirt at waist and omitting the ribbing. Taking half a stitch into each seam, join the raglan, side and sleeve seams; press. Sew front border into position as shown, with buttonhole on the appropriate side at waist. Sew on button to correspond with buttonhole. Give final pressing.

Our cover outfit

A Two-colour Winner

Another Chunky sweater

First size for Knitmasters with 135 Needles or more; larger size for Knitmasters with 168 Needles or more.

MATERIALS: Sweater: 14 (15) oz. Listers Lavenda Double Six in main colour; 14 (15) oz. Listers Lavenda Double Six in contrasting colour; 6¾ yards cord in second contrasting colour; 2 yards ½-inch wide elastic; 1¼ yards ½-inch wide bias binding.
Hat: 2 oz. Listers Lavenda Double Six in main colour; 2 oz. Listers Lavenda Double Six in contrasting colour; 3¾ yards cord in second contrasting colour; ¾ yard ½-inch wide elastic; ¾ yard 1-inch wide bias binding.
Mittens: 2 oz. Listers Lavenda Double Six in main colour; 2 oz. Listers Lavenda Double Six in contrasting colour; 3½ yards cord in second contrasting colour; 3 stitch holders; ½ yard 1-inch wide bias binding.
Socks: 2 oz. Listers Lavenda Double Six in main colour; 2 oz. Listers Lavenda Double Six in contrasting colour; 1 yard cord in second contrasting colour; stitch holder; ¾ yard 1-inch wide bias binding.

MEASUREMENTS: Sweater: To fit a 32–34 (36–38) inch bust (actual garment measures 38 (42) inches); completed length from top of shoulder, 26 inches (adjustable); completed sleeve seam, 16½ inches (adjustable).
Hat. Depth to centre with brim turned back, approximately 6 inches (adjustable); width all round front edge, approximately 22 inches.
Mittens: Length to wrist, 7 inches (adjustable); width round hand above thumb, approximately 7 inches.
Socks: Length of foot, 9 inches (adjustable); width round foot, 8½ inches.

TENSION: 10 stitches and 14 rows to 2 inches measured over stocking stitch knitted on alternate Needles.

ABBREVIATIONS: M, main colour; C, contrasting colour; H.P., Holding Position; W.P., Working Position.

NOTES: Figures in brackets refer to the larger size. ½ a stitch only is allowed for seams on all pieces. It will be necessary to give each piece a good downward tug before pressing.

SWEATER

BACK

Left half. Using M, cast on 49 (54) stitches *on alternate Needles*. Change to Tension 9 and knit 165 rows without shaping (164 rows only for right half). (Cam Box is at left.)
Shape shoulder. Always taking wool round first inside Needle, push 2 Needles opposite Cam Box end into H.P. on the next and every following alternate row 5 (3) times altogether; knit 1 row. Push 3 Needles opposite Cam Box end into H.P. on the next and following alternate row.
2nd size only. Knit 1 row. Push 4 Needles opposite Cam Box end into H.P. on the next and following alternate row.
Both sizes. (Cam Box is at right.)
Shape neck. Push 7 Needles opposite Cam Box end into H.P. on the next row, 4 Needles on the next row, 5 Needles on the next row, 4 Needles on next row, 5 Needles on next row and 4 Needles on next row (4 (5) Needles remain in W.P. in centre). Push all Needles opposite Cam Box end from H.P. back into W.P. on the next 2 rows. Mark stitch 17 from the left edge with different wool. Cast off loosely.
Right half. Using C instead of M, follow instructions for left half of Back but reverse the shapings by noting alteration in number of rows worked and reading right for left and vice versa.

FRONT

Right half. Using C, cast on 49 (54) stitches *on alternate Needles*. Change to Tension 9 and knit 164 rows without shaping (163 rows only for left half). (Cam Box is at right.)
Shape neck and shoulder. Always taking wool round the first inside Needle in H.P., push 2 Needles opposite Cam Box end into H.P. on the next 11 (7) rows, 3 Needles on next row, 2 Needles on next row and 3 Needles on next row.
2nd size only. *Push 2 more Needles opposite Cam Box end into H.P. on next row and 4 Needles on next row*. Repeat the last 2 rows, from * to *, once more.
Both sizes. **Push 1 more Needle opposite Cam Box end into H.P. on next row and 4 Needles on next row**. Repeat the last 2 rows, from ** to **, twice more (4 (5) Needles remain in W.P. in centre). Push all Needles opposite Cam Box end from H.P. back into W.P. on the next 2 rows. Mark stitch 17 from the left edge with different wool. Cast off loosely.
Left half. Using M instead of C, follow instructions for right half of Front but reverse the shapings by noting alteration in number of rows worked and reading left for right and vice versa.

SLEEVES

Right sleeve. Using M, cast on 39 (42) stitches *on alternate Needles*. Change to Tension 9 and knit 6 rows without shaping. Increase 1 stitch at beginning of the next 2 rows and every following 7th and 8th rows 14 times altogether (67 (70) stitches). Knit 6 rows without shaping. (Adjust length at this stage, if desired.)
Shape top. Always taking wool round first inside Needle in H.P. push 2 Needles opposite Cam Box end into H.P. on the next 30 rows 7 (10) Needles remain in W.P. in centre.) Push all Needles opposite Cam Box end from H.P. back into W.P. on the next 2 rows. Cast off loosely.
Left sleeve. Follow instructions for right sleeve but use C instead of M.

COLLAR (4 pieces)

First piece. Using M, cast on 49 stitches *on alternate Needles*. Change to Tension 9 and knit 2 rows without shaping. Decrease 1 stitch at beginning of the next 28 rows (21 stitches remain). Knit 6 rows without shaping. Increase 1 stitch at beginning of next 6 rows. Cast off loosely.
Second piece. Follow instructions for first piece.
Third and fourth pieces. Follow instructions for first piece but use C instead of M.

TO MAKE UP

Pull each piece downwards into shape and press carefully with a hot iron over a damp cloth. Join the centre front and back seams, taking in ½ stitch from each piece, press. Join the shoulder and sleeve seams and press. Set in sleeves, then join the side seams; press. Join the 1st and 2nd pieces of collar together and the 3rd and 4th pieces, then join these 2 halves along the centre front and back seams; press. Sew the cast-off edge of collar into position, with the 1st and 2nd pieces on the right. Face the outer edge of collar with bias

Continued on page 26

SIMPLE PRACTICAL AND WARM

For Knitmasters with 135 Needles or more.

MATERIALS: 9 (10, 11) oz. Emu Double Crepe; 5 buttons.

MEASUREMENTS: To fit a 22 (24, 26) inch chest (actual garment measures 24 (26, 28) inches); length at centre back without neckband, 13 (14, 15) inches; sleeve seam, 10½ (12, 13½) inches (adjustable).

TENSION: 12 stitches and 18 rows to 2 inches, measured over stocking stitch.

NOTES: Figures in brackets refer to the larger sizes respectively.
Fully fashioning on raglan should be worked 2 stitches in by transferring the 3rd stitch on to the 4th Needle and moving the 2 end stitches 1 Needle in.

BACK
Cast on 73 (79, 85) stitches. Change to Tension 8 and knit 16 rows. Drop every alternate stitch and pick up as for ribbing. Change to Tension 10 and increase 1 stitch at both edges. Knit 56 (60, 66) rows without shaping.
Shape raglan armholes. Cast off 2 stitches at beginning of next 2 rows. Decrease 1 stitch 2 stitches in (see Notes) at beginning of next 46 (50, 54) rows. Cast off remaining 25 (27, 29) stitches.

RIGHT FRONT
Cast on 35 (39, 41) stitches. Change to Tension 8 and knit 16 rows. Drop every alternate stitch and pick up as for ribbing. Change to Tension 10 and increase 1 stitch at right edge. Knit 56 (60, 66) rows without shaping. (Knit 1 row extra for Left Front only.)
Shape raglan armhole. Cast off 2 stitches at beginning of next row; knit 1 row. Decrease 1 stitch 2 stitches in (see Notes) at beginning of next and following alternate row.
Shape neck. Decreasing 1 stitch at neck edge on the next and every following 4th row 9 (11, 11) times altogether *at the same time* decrease 1 stitch 2 stitches in (see Notes) on the 2nd and every following alternate row 21 (23, 25) times altogether. Cast off remaining 2 stitches.

LEFT FRONT
Follow instructions for Right Front but reverse the shapings by noting alteration in number of rows worked and reading left for right.

SLEEVES (both alike)
Cast on 35 (37, 39) stitches. Change to Tension 8 and knit 20 rows. Drop every alternate stitch and pick up as for ribbing. Change to Tension 10. Increase 1 stitch at beginning of next 2 rows and every following 6th and 7th (7th and 8th, 7th and 8th) rows 10 (11, 12) times altogether (55 (59, 63) stitches. Knit 11 (8, 14) rows without shaping (96 (110, 124) rows from beginning of ribbing). (Adjust length at this stage, if desired.)
Shape raglan top. Cast off 2 stitches at beginning of next 2 rows. Decrease 1 stitch (2 stitches in) at beginning of next 46 (50, 54) rows. Cast off remaining 5 stitches.

FRONT BORDER
Cast on 13 stitches. Change to Tension 8 and knit 4 (4, 6) rows. Drop every alternate stitch and pick up as for ribbing. *Make a buttonhole over 3 Needles in centre. Knit 18 (19, 20) rows. Drop every alternate stitch and pick up as for ribbing. *Repeat from * to * 3 more times. Make another buttonhole over the same Needles as before (5 buttonholes altogether). Dropping every alternate stitch at convenient intervals and picking up as for ribbing, knit until border is long enough to go along both front edges and across back of neck. Cast off in rib by hand.

TO MAKE UP
Press each piece carefully with a hot iron over a damp cloth, omitting the ribbing. Join the raglan, side and sleeve seams; press. Sew front border into position, and finish buttonholes. Sew on buttons to correspond. Give final pressing.

Save and succeed with
PUSSYFOOT
DOUBLE KNITTING

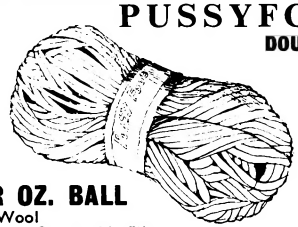

1/3 PER OZ. BALL
60% Pure Wool
40% Larana—a Courtaulds Fibre
11 Attractive Shades. Dries more quickly than 100% wool. Resists shrinking and felting.
Sell Pussyfoot to your friends—write for generous agency terms
Write for free shade card to:—
BROADELEC & COMPANY LIMITED
Knitting Wool Division
PEEL HOUSE MILL, HADFIELD, VIA HYDE, CHESHIRE

AUTUMN FOURSOME

For Knitmasters with 168 Needles or more.

MATERIALS: Jacket: 10 oz. Robin Ny-lona Sportswear 4-ply wool in main colour (dark); 7 oz. Robin Ny-lona Sportswear 4-ply wool in contrasting colour (light); 4 large buttons; stitch holder; ¾ yd. 1-inch bias binding.
Skirt: 7 oz. Robin Ny-lona Sportswear 4-ply wool in main colour (dark); 5 oz. Robin Ny-lona Sportswear 4-ply wool in contrasting colour (light); 2 stitch holders; crochet hook; 7-inch Lightning zip fastener; 2 hooks and and eyes; ¾ yd. 1-inch elastic for waist.
Scarf: 5 oz. Robin Ny-lona Sportswear 4-ply wool in main colour (dark); 3 oz. Robin Ny-lona Sportswear 4-ply wool in contrasting colour (light).
Jumper: 13 oz. Robin Ny-lona Sportswear 4-ply wool in contrasting colour (light); stitch holder.

MEASUREMENTS: Jacket: To fit a 34-36 inch bust (actual garment measures 41 inches); completed length at back from top of shoulder, 22½ inches; completed sleeve seam, 12½ inches.
Skirt: To fit 36-38 inch hips (actual garment measures 39 inches); completed length without waistband, 26 inches (adjustable).
Scarf: Completed width, 6 inches; length without fringes, 54 inches (adjustable).
Jumper: To fit a 34-36 inch bust (actual garment measures 39½ inches); completed length from top of shoulder, 20 inches (adjustable); sleeve seam, 11 inches.

TENSIONS: 13 stitches and 26 rows (6½ patterns) to 2 inches, measured over check pattern; 14 stitches and 20 rows to 2 inches, measured over stocking stitch.

ABBREVIATIONS: W.P., Working Position; H.P., Holding Position; M, main colour; C, contrasting colour.

JACKET

BACK

Using M, cast on 124 stitches. Change to Tension 5 and knit 10 rows. Change to Tension 7 and work in pattern as follows:—*Push the 1st and every following 3rd Needle into H.P. Change to C and, always taking wool round end Needle in H.P., knit 2 rows. Push Needles from H.P. back into W.P. Change to M and knit 2 rows.* The last 4 rows, from * to *, form 1 complete pattern, which should be repeated throughout. Knit 18 more rows in pattern without shaping. Keeping pattern correct, increase 1 stitch at beginning of the next 2 rows and every following 19th and 20th rows 6 times altogether (136 stitches). Knit 34 rows without shaping.
Shape armholes. Keeping pattern correct, cast off 3 stitches at beginning of next 2 rows; knit 2 rows. Cast off 2 stitches at beginning of the next 2 rows and every following 3rd and 4th rows 6 times altogether (106 stitches remain). Knit 90 rows without shaping.
Shape shoulders. Keeping pattern correct, cast off 6 stitches at beginning of the next 2 rows and following 3rd and 4th rows; knit 2 rows.
Shape neck. Using an odd length of M, cast off 16 stitches in centre and slip 33 stitches at left on to a stitch holder.
Knit the right part as follows:—Keeping pattern correct, cast off 6 stitches at beginning of next row and 8 stitches at beginning of next row; knit 2 rows. Cast off 6 stitches at beginning of next row and 5 stitches at beginning of next row. Cast off remaining 8 stitches. Knit the left part as for right part but reverse the shapings by starting with Cam Box at left.

LEFT FRONT

Using M, cast on 54 stitches. Change to Tension 5 and knit 10 rows (knit 1 row extra for Right Front only). Change to Tension 7 and cast on 31 stitches at right edge (85 stitches altogether). Working in pattern as given for Back from * to *, knit 23 rows without shaping. Keeping pattern correct, increase 1 stitch at beginning of the next and every following 20th row 6 times altogether (91 stitches). Knit 22 rows without shaping. (Cam Box is at right.)
Bust dart. Always taking wool round the first inside Needle in H.P., push 9 Needles opposite Cam Box end into H.P. on the next and every following 4th row 3 times altogether; knit 3 rows. Push all Needles opposite Cam Box end from H.P. back into W.P. on the next row; knit 12 rows without shaping. (Cam Box is at left.)
Shape armhole. Keeping pattern correct, cast off 3 stitches at beginning of next row; knit 3 rows. Cast off 2 stitches at beginning of the next and every following 4th row 6 times altogether. Knit 70 rows without shaping. (Cam Box is at right.)
Shape neck. Cast off 33 stitches at beginning of next row; knit 3 rows. Cast off 4 stitches at beginning of next row; knit 3 rows. Cast off 2 stitches at beginning of the next and every following 4th row 3 times altogether; knit 3 rows. Decrease 1 stitch at beginning of next row. (Cam Box is at left.)
Shape shoulder. Keeping neck edge straight, cast off 6 stitches at beginning of the next and every following 4th row 4 times altogether. Cast off remaining 8 stitches.

RIGHT FRONT

Follow instructions for Left Front but reverse the shapings by noting alteration in number of rows worked and reading left for right and vice versa and making buttonholes over Needles 5, 6, 7, 8, 9 and 23, 24, 25, 26, 27 from left edge on the following rows from beginning:—46, 118, 190, 262.

SLEEVES (both alike)

Using M, cast on 64 stitches. Change to Tension 5 and knit 10 rows. Change to Tension 7 and, working in pattern as given for Back from * to *, knit 14 rows without shaping. Increase 1 stitch at beginning of the next 2 rows and every following 7th and 8th rows 16 times altogether; knit 6 rows without shaping. Increase 1 stitch at beginning of the next 2 rows and every following 3rd and 4th rows 5 times altogether (106 stitches). Knit 2 rows without shaping.
Shape top. Keeping pattern correct, cast off 3 stitches at beginning of next 2 rows, knit 2 rows. Cast off 2 stitches at beginning of the next 2 rows and every following 3rd and 4th rows 6 times altogether; knit 2 rows. Cast off 4 stitches at beginning of the next 2 rows and following 3rd and 4th rows; knit 2 rows. Cast off 5 stitches at beginning of the next 2 rows and following 3rd and 4th rows; knit 2 rows. Cast off 6 stitches at beginning of the next 2 rows and following 3rd and 4th rows. Cast off remaining 16 stitches.

TO MAKE UP

Press each piece carefully with a hot iron over a damp cloth. Join the shoulder, side and sleeve seams and press. Set in sleeves; press. Turn up plain rows around lower and sleeve edges and catch down on the inside; press. Turn in 15 stitches along both front edges and catch down on the inside, catching together at neck and

Continued on page 14

lower edges; press. Finish buttonholes and sew on buttons to correspond. Face neck edge with bias binding. Give final pressing.

SKIRT

BACK

Using M cast on 118 stitches. **Change to Tension 5 and knit 10 rows. Change to Tension 7 and, working in pattern as given for Back of Jacket from * to *, knit 54 rows without shaping. Keeping pattern correct, increase 1 stitch at beginning of the next 2 rows and every following 55th and 56th rows 3 times altogether (124 stitches (133 stitches on Front). Knit 78 rows without shaping. (Adjust length at this stage, if desired.)

Shape to waist. Keeping pattern correct, decrease 1 stitch at beginning of the next 2 rows; knit 18 rows without shaping. Decrease 1 stitch at beginning of the next 2 rows and following 11th and 12th rows; knit 8 rows without shaping.**

Waist darts. Counting from both edges, transfer stitches 37 on to their adjacent Needles and slip 36 stitches at left on to one stitch holder and 44 stitches in centre on to a second stitch holder.

Knit the right part as follows:—Keeping pattern correct, knit 2 rows without shaping. ***Decrease 1 stitch at beginning of next row; knit 4 rows. Decrease 1 stitch at beginning of next row; knit 2 rows.*** Repeat the last 8 rows, from *** to ***, 4 more times. Decrease 1 stitch at beginning of the next and following 4th row. Decrease 1 stitch at beginning of next row. Cast off remaining 23 stitches.

Knit the left part as for right part but reverse the shapings by starting with Cam Box at left.

Knit the centre part as follows:—With Cam Box at right and purl side facing, replace 44 stitches from stitch holder back on to machine. Keeping pattern correct, knit 6 rows without shaping. Decrease 1 stitch at beginning of the next 2 rows and every following 7th and 8th rows 6 times altogether. Cast off remaining 32 stitches.

Waistband. Join the dart seams and press. Push up 74 Needles into W.P. and, with purl side of Back facing and Cam Box at right, pick up 74 stitches along waist edge and place them on to the machine. Still at Tension 7 knit 18 rows in M without shaping. Cast off.

FRONT

Using M, cast on 127 stitches. Now follow instructions for Back of Skirt from ** to **. Knit 2 more rows without shaping. Decrease 1 stitch at beginning of the next 2 rows and following 7th and 8th rows.

Waist darts. Counting from both edges. transfer stitches 40 on to their adjacent Needles and slip 39 stitches at left on to one stitch holder and 43 stitches in centre on to a second stitch holder.

Knit the right part as follows:—Knit 6 rows without shaping. *Decrease 1 stitch at beginning of next row; knit 4 rows. Decrease 1 stitch at beginning of next row; knit 2 rows.* Repeat the last 8 rows, from * to *, twice more. Decrease 1 stitch at beginning of the next and following 4th row; knit 1 row. Cast off remaining 31 stitches.

Knit the left part as for right part but reverse the shapings by starting with Cam Box at left.

Knit the centre part as follows:—With Cam Box at right and purl side facing, replace 43 stitches from stitch holder back on to the machine. Keeping pattern correct, knit 10 rows without shaping. Decrease 1 stitch at beginning of the next 2 rows and every following 7th and 8th rows 3 times altogether; knit 8 rows without shaping. Cast off remaining 37 stitches.

Waistband. Join the dart seams and press.

Push up 95 Needles into W.P. and, with purl side of Front facing and Cam Box at left, pick up 95 stitches along waist edge and place them on to the machine. Change to Tension 7 and, using M, cast on 8 stitches at left edge (103 stitches altogether). Still at Tension 7, knit 18 rows in M without shaping. Cast off.

TO MAKE UP

Press each piece carefully with a hot iron over a damp cloth. Join the side seams, leaving 7 inches open at top of left side seam for zip; press. Using M, work 1 or 2 rows of double crochet along edges of zip opening and sew in zip; press. Turn up plain rows along lower edge and catch down on the inside; press. Cut elastic to fit waist plus 1 inch. Fold waistband in half over elastic, catch down cast-off edge on the inside and secure ends. Sew on hooks and eyes as required. Give final pressing.

SCARF

Using M, cast on 79 stitches. Change to Tension 7 and

knit 2 rows. Working in pattern as given for Back of Jacket from * to *, knit 39 rows without shaping. Now make 2 buttonholes over Needles 29, 30, 31, 32 and 33 counting from both edges. *Knit 72 more rows in pattern without shaping. Make 2 more buttonholes over the same Needles as before.* Repeat from * to * twice more (4 sets of buttonholes altogether.) Now knit 445 more rows in pattern without shaping. Cast off.

TO MAKE UP
Press carefully with a hot iron over a damp cloth. Fold in half lengthways and join the side seams; press with seam along one fold and finish buttonholes. Cut M into 8 inch lengths and make a fringe along both ends as shown. Give final pressing.

JUMPER

BACK
Using C, cast on 124 stitches. Change to Tension 5 and knit 19 rows without shaping. Change to Tension 10 and knit 1 row. Change to Tension 7 and knit 42 rows without shaping. Increase 1 stitch at beginning of the next 2 rows and every following 7th and 8th rows 8 times altogether (140 stitches). Knit 8 rows without shaping. (Adjust length at this stage, if desired.)
Shape armholes. Cast off 3 stitches at beginning of next 2 rows, 2 stitches at beginning of next 10 rows and decrease 1 stitch at beginning of next 4 rows (110 stitches remain)*. Knit 66 rows without shaping.
Shape shoulders. Cast off 5 stitches at beginning of next 2 rows.
Shape neck. Using an odd length of C, cast off 14 stitches in centre and slip 43 stitches at left on to a stitch holder.
Knit the right part as follows:—Cast off 5 stitches at beginning of next row, 6 stitches at beginning of next row, 5 stitches at beginning of next row, 4 stitches at beginning of next row, 5 stitches at beginning of next row, 3 stitches at beginning of next row, 5 stitches at beginning of next row and 3 stitches at beginning of next row. Cast off remaining 7 stitches.
Knit the left part as for right part but reverse the shapings by starting with Cam Box at left.

FRONT
Follow instructions for Back to *. Knit 48 rows without shaping.
Shape neck. Using an odd length of C, cast off 14 stitches in centre and slip 48 stitches at left on to a stitch holder.
Knit the right part as follows:—Knit 1 row. Cast off 4 stitches at beginning of next row; knit 1 row. Cast off 3 stitches at beginning of next row; knit 1 row. Cast off 2 stitches at beginning of the next and following alternate row; knit 1 row. Decrease 1 stitch at beginning of the next and every following alternate row 5 times altogether. (Cam Box is at right.)
Shape shoulder. Keeping neck edge straight, cast off 5 stitches at beginning of the next and every following alternate row 5 times altogether; knit 1 row. Cast off remaining 7 stitches.
Knit the left part as for right part but reverse the shapings by starting with Cam Box at left.

SLEEVES (both alike)
Using C, cast on 63 stitches. Change to Tension 5 and knit 19 rows. Change to Tension 10 and knit 1 row. Change to Tension 7 and knit 8 rows without shaping. Increase 1 stitch at beginning of the next 2 rows and every following 7th and 8th rows 9 times altogether; knit 6 rows without shaping. Increase 1 stitch at beginning of the next 2 rows and following 3rd and 4th rows; knit 2 rows. Increase 1 stitch at beginning of next 20 rows (105 stitches altogether). Knit 2 rows without shaping.
Shape top. Cast off 3 stitches at beginning of next 2 rows, 2 stitches at beginning of next 14 rows and decrease 1 stitch at beginning of next 28 rows. Cast off 2 stitches at beginning of next 10 rows and 3 stitches at beginning of next 4 rows. Cast off remaining 11 stitches.

COLLAR
Using C, cast on 126 stitches. Change to Tension 5 and knit 5 rows. Change to Tension 10 and knit 1 row. Change to Tension 7 and knit 20 rows. Slip stitches on to a stitch holder. Push 117 Needles into W.P. and, with purl side facing and Cam Box at right, replace stitches from stitch holder on to these Needles as follows:—1 stitch on to each of the first 9 Needles, *2 stitches together on to the next Needle and 1 stitch on to each of the next 11 Needles*. Repeat from * to * to end. Knit 10 rows without shaping. Slip stitches back on to a stitch holder. Push up 108 Needles into W.P. and, with purl side facing and Cam Box at right, replace stitches from stitch holder on to these Needles

Continued on page 27

Whatever the Weather

First 4 sizes for Knitmasters with 135 Needles or more and Ribmaster attachment; largest size for Knitmasters with 169 Needles or more and Ribmaster attachment.

MATERIALS: 8 (9, 10, 11, 12) oz. Marriners Mainsail 4-ply wool in main colour, 2 (2, 2, 3, 3) oz. Marriners Mainsail 4-ply wool in contrasting colour.

MEASUREMENTS: To fit a 22 (24, 26, 28, 30) inch chest (actual garment measures 25 (27, 29, 31, 33) inches); completed length from top of shoulder, 14 (15½, 17, 18½, 20) inches; completed sleeve seam, 9 (10½, 12, 13½, 15) inches.

TENSION: 17 stitches and 26 rows to 2 inches, measured over rib pattern.

ABBREVIATIONS: W.P., Working Position; H.P., Holding Position; M, main colour; C, contrasting colour.

NOTE: Figures in brackets refer to the larger sizes respectively.

BACK

With Ribmaster in position and using M, cast on 109 (117, 125, 133, 143) stitches. Change to Tensions 4 Knitmaster and 6 Ribmaster and knit 14 rows in 1 × 1 rib. Change to C and knit 4 rows in 1 × 1 rib. Change to M and knit 12 rows in 1 × 1 rib. Change to Tensions 6 Knitmaster and 8 Ribmaster and work in pattern as follows:—

***Rows 1 and 2.** Always counting from the right and taking wool round end Needle in H.P., push the 2nd and every following alternate Knitmaster Needle into H.P. Change to C and knit 2 rows.

Rows 3 and 4. Push Needles from H.P. back into W.P. Change to M and knit 2 rows.

Rows 5 and 6. Push the 1st and every following alternate Knitmaster Needle into H.P., knit 2 rows.

Rows 7 and 8. Push Needles from H.P. back into W.P., knit 2 rows.

Rows 9 and 10. Push the 2nd and every following alternate Knitmaster Needle into H.P., knit 2 rows.

Rows 11 and 12. Push Needles from H.P. back into W.P., knit 2 rows.

Rows 13 and 14. Push the first and every following alternate Knitmaster Needle into H.P., knit 2 rows.

Rows 15 and 16. Push Needles from H.P. back into W.P., knit 2 rows.*

The last 16 rows, from * to * form 1 complete pattern, which should be repeated throughout. Knit 82 (96, 108, 120, 134) more rows in pattern without shaping.

Shape raglan armholes. Keeping pattern correct, cast off 3 (3, 3, 3, 4) stitches at beginning of next 2 rows and 2 stitches at beginning of next 8 (8, 8, 10, 10) rows. Decrease 1 stitch at beginning of next 2 (8, 8, 4, 10) rows.***

**Knit 2 rows without shaping. Decrease 1 stitch at beginning of next 6 rows. **Repeat the last 8 rows, from ** to **, 5 (5, 6, 7, 7) more times (49 (51, 53, 55, 57) stitches remain).

Shape neck. Using an odd length of M, cast off 11 (13, 15, 17, 19) stitches in centre and push Knitmaster Needles at right into H.P. Transfer the stitches on Ribmaster Needles at left on to the corresponding Knitmaster Needles, then knit several rows in stocking stitch over these stitches with different wool and release from the machine. Take Cam Box to right of Needle Bed and push Knitmaster Needles from H.P. back into W.P.

Knit the right part as follows:—(Knit 1 row for left part only.) Knit 1 row. Cast off 5 stitches at beginning of next row and decrease 1 stitch at beginning of next row. Cast off 4 stitches at beginning of next row and decrease 1 stitch at beginning of next row. Cast off 3 stitches at beginning of next row and decrease 1 stitch at beginning of next row. Cast off 2 stitches at beginning of next row. Fasten off remaining 2 stitches. Knit the left part as for right part but reverse the shapings by starting with Cam Box at right and noting alteration in number of rows worked.

FRONT

Follow instructions for Back to ***.

Knit 2 rows without shaping. Decrease 1 stitch at beginning of next 6 rows.

Repeat the last 8 rows from * to * 3 (3, 3, 4, 4) more times. Knit 2 (0, 2, 2, 2) rows without shaping.

3rd and 4th sizes only. Decrease 1 stitch at beginning of next (4, 2) rows.

All sizes. Shape neck. Using an odd length of M, cast off 7 stitches in centre and push Knitmaster Needles at right into H.P. Transfer the stitches on Ribmaster Needles at left on to their corresponding Knitmaster Needles, then knit several rows in stocking stitch over these stitches with different wool and release from the machine. Take Cam Box to right of Needle Bed and push Knitmaster Needles from H.P. back into W.P.

Knit the right part as follows:—(Knit 1 row extra for left part only.)

1st size only. Decrease 1 stitch at beginning of next row and cast off 4 stitches at beginning of next row. Decrease 1 stitch at beginning of next row and cast off 3 stitches at beginning of next row. Decrease 1 stitch at beginning of next row. Cast off 2 stitches at beginning

of next and following alternate row. Decrease 1 stitch at beginning of next row and cast off 2 stitches at beginning of next row. Decrease 1 stitch at beginning of next 4 rows.

2nd size only. Knit 1 row. Cast off 4 stitches at beginning of next row. Decrease 1 stitch at beginning of next row and cast off 3 stitches at beginning of next row. *Decrease 1 stitch at beginning of next row and cast off 2 stitches at beginning of next row*. Repeat the last 2 rows from * to *, once more. Knit 1 row. Cast off 2 stitches at beginning of next row and decrease 1 stitch at beginning of next 6 rows.

3rd size only. Decrease 1 stitch at beginning of next row and cast off 4 stitches at beginning of next row; knit 1 row. Cast off 3 stitches at beginning of next row. *Decrease 1 stitch at beginning of next row and cast off 2 stitches at beginning of next row*. Repeat the last 2 rows from * to *, twice more. Knit 1 row. Decrease 1 stitch at beginning of next 7 rows.

4th size only. Decrease 1 stitch at beginning of next row, and cast off 4 stitches at beginning of next row. De-

Continued on page 22

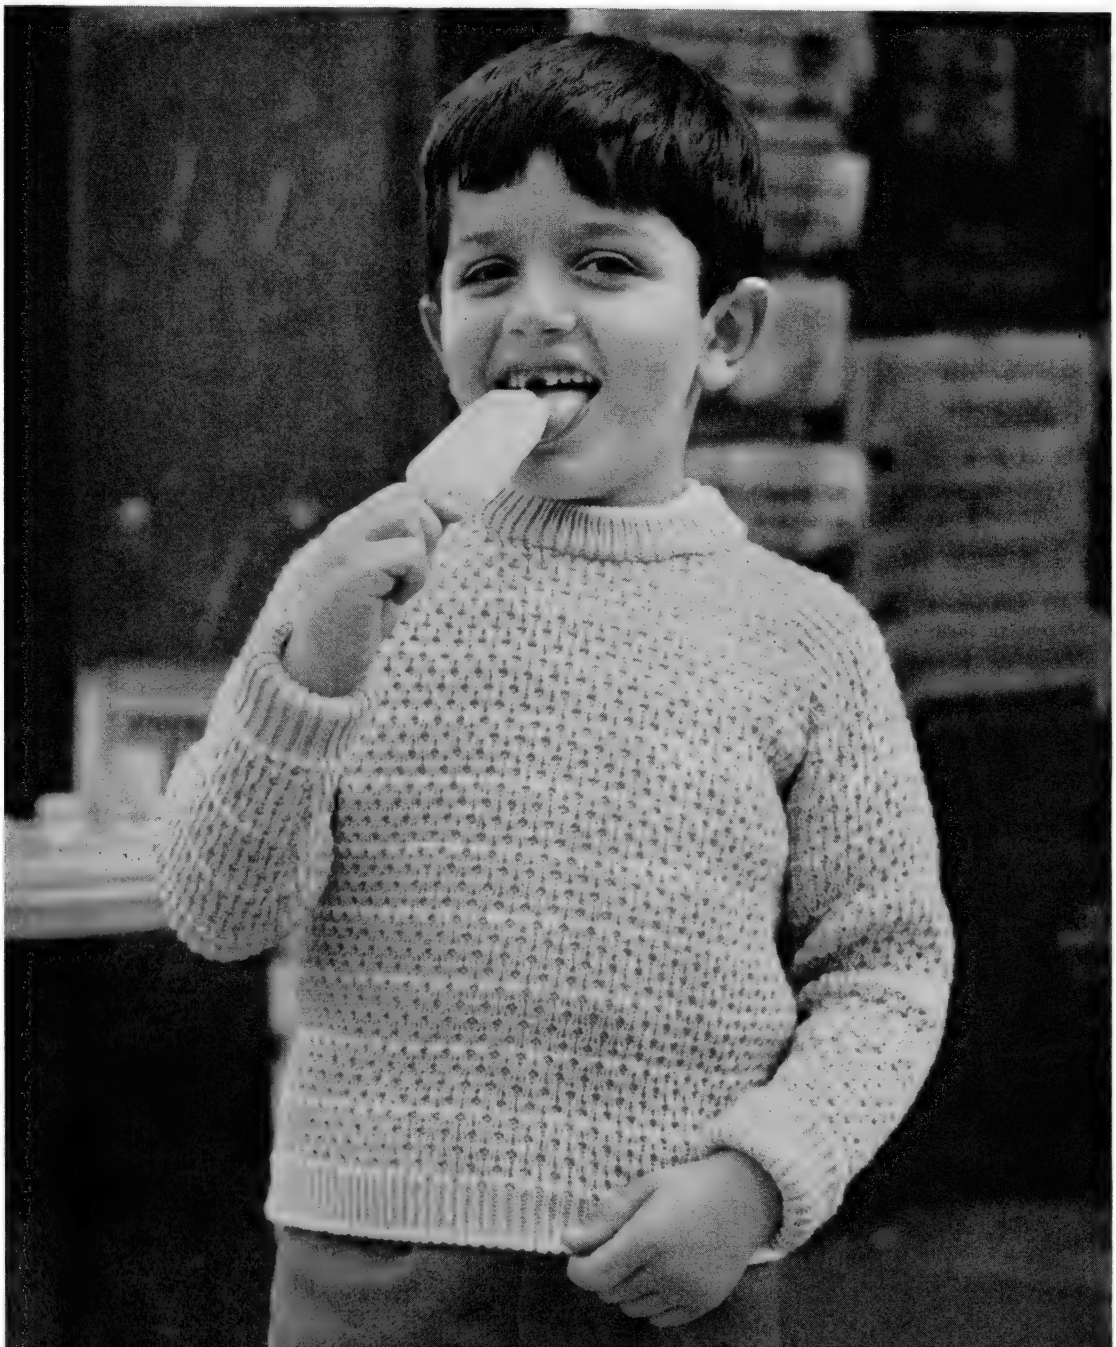

CHRISTMAS BUYS

Made by Ambray and obtainable at Woolworths, this colourful two-tiered jar containing bath crystals and a fluffy lamb's wool puff, price 7s. 6d.

FOR MUMS

Made by Innoxa (England) Ltd., this Veneto Skin Perfume, price 17s. 6d.

Black and White Minstrel—new from Childsplay. Dressed in white sailcloth morning suit with gold and black trimmings on his jacket and white topper, price 42s. 0d.

"Billie Bunny" created by Childsplay, 22 inches high. Made of rayon plush with kay striped rayon trousers. He is filled with Kapok and has safety 'lock-in' eyes and squeaker, price 32s. 6d.

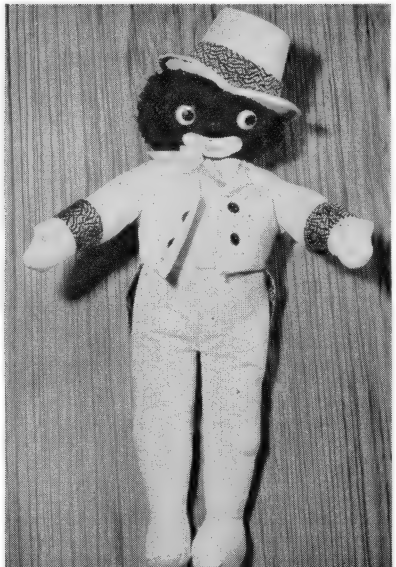

FOR TOTS

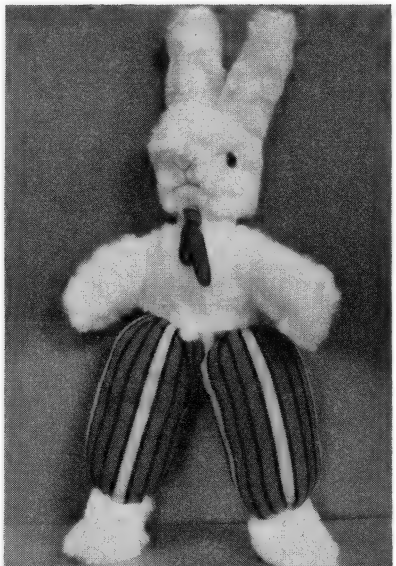

Made
Cedar
price 7

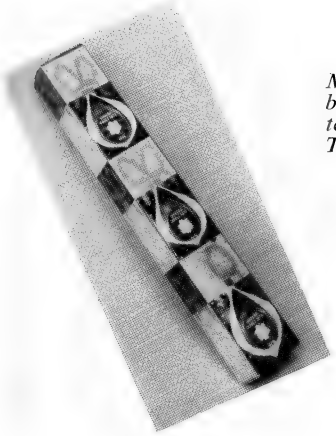

Made by Goya this lovely bubble bath gift—just right to hang on the Christmas Tree, price 4*s.* 6*d.*

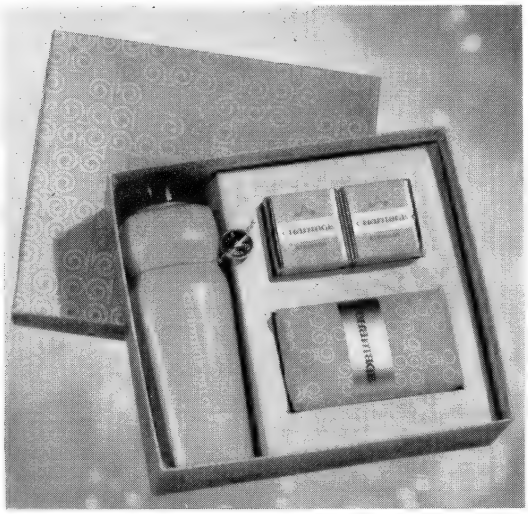

Made by Atkinson's—Chantage Talcum Powder, Toilet Soap and Bath Cubes—gift coffret, price 8*s.* 6*d.*

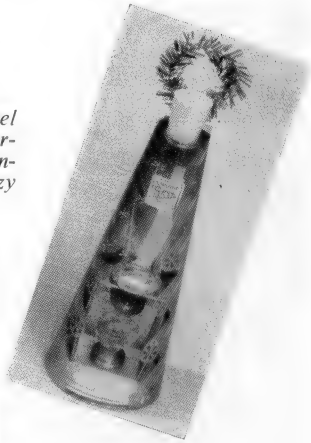

Made by Goya, novel gift of miniature perfume and cologne. (Entice 11*s.* 6*d. Frenzy* 13*s.* 6*d.*)

Made by Goya this Decanter Gift, novel pack of Cedar Wood After-Shave Lotion for 'top' men, price 10*s.* 0*d.*

by Goya, Wood Duo, s. 8*d.*

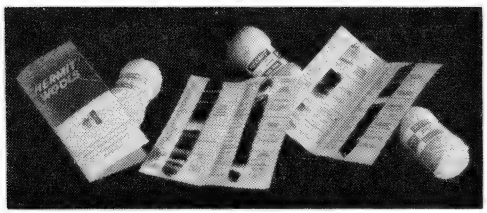

Send NOW for this exciting NEW RANGE of

'HERMIT' KNITTING WOOLS

Our very extensive range includes all wool double knitting, crepe fingering and double knitting, Brinylons, Triple Knit, Chunky-Knits, Brushed Mohair and Baby Knits. **From 1/- per oz.**

Send 3d. stamp with coupon for free samples of full range to:—

HERBERT SMITH (HERMIT) LTD., Dept. K.7
CALEDONIA STREET, BRADFORD

Name.....

Address.....

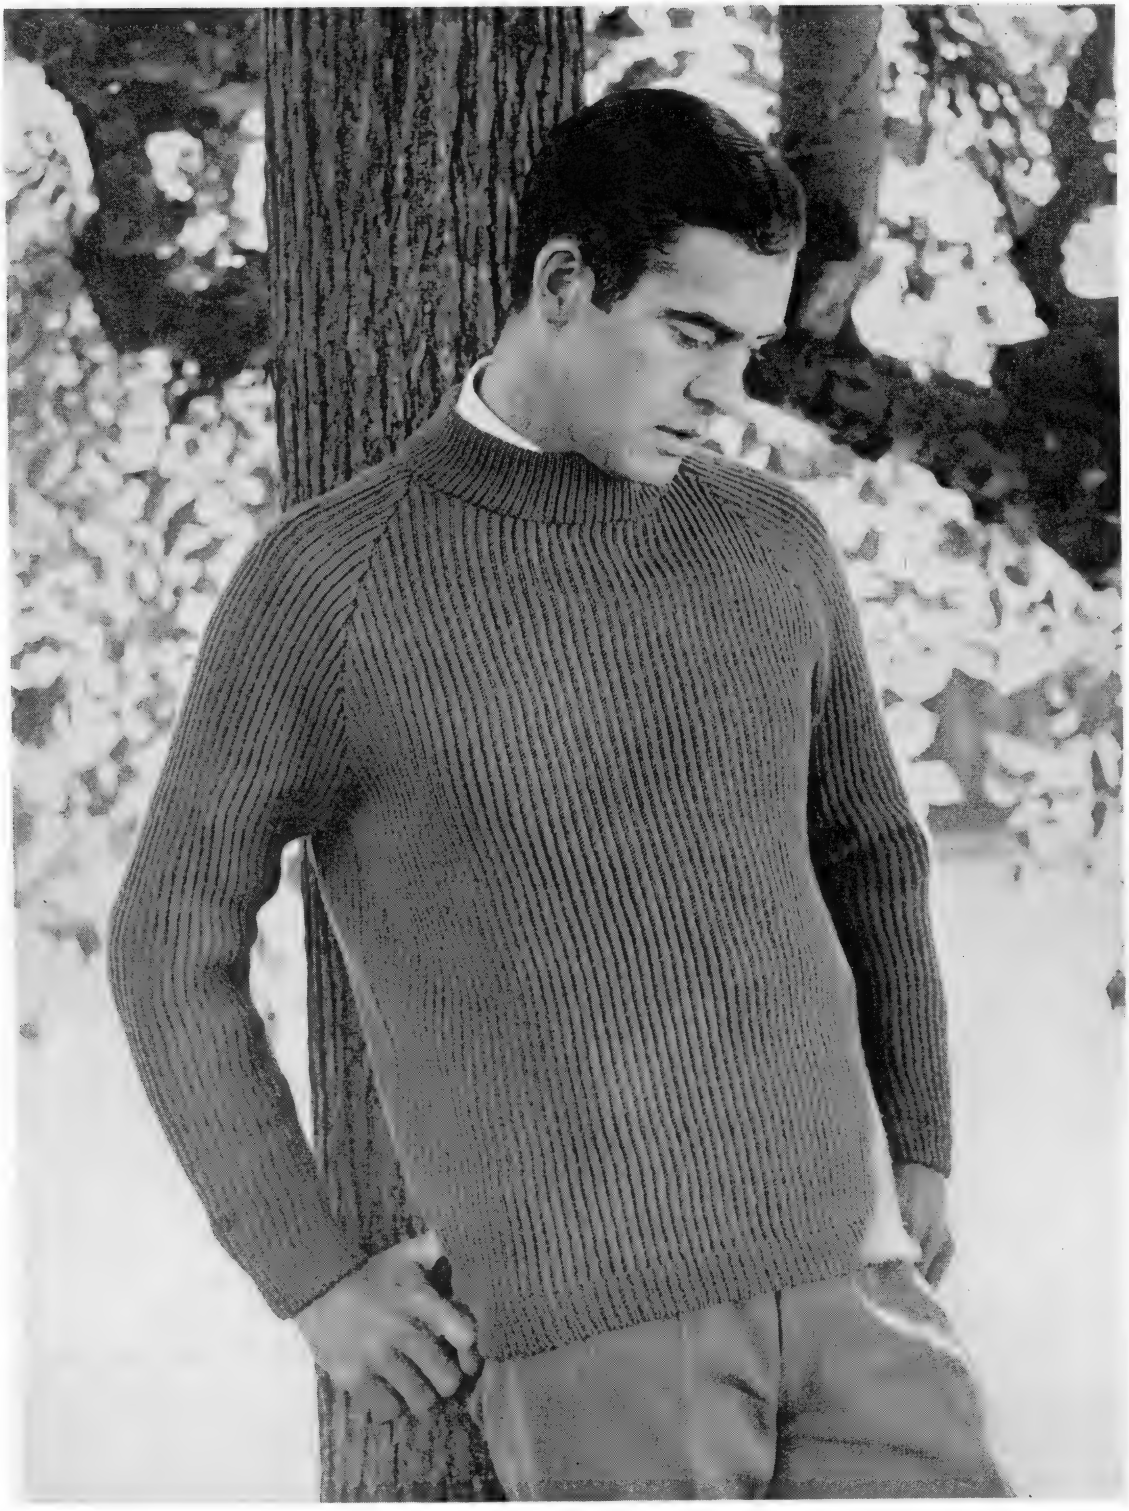

For Knitmasters with 169 Needles or more and Ribmaster attachment.

MATERIALS: 19 (19, 20, 20) oz. Marriners Mainsail 3-ply wool; an odd length of different colour wool.

MEASUREMENTS: To fit a 36 (38, 40, 42) inch chest (actual garment measures (39½ (41½, 43½, 45½) inches); completed length from top of shoulder, 25 (25½, 26, 26½) inches (adjustable); completed sleeve seam, 17 (17½, 18, 18½) inches.

TENSION: 14 stitches and 40 rows to 2 inches, measured over Brioche rib.

ABBREVIATIONS: W.P., Working Position; H.P., Holding Position.

NOTE: Figures in brackets refer to the larger sizes respectively.

BACK

With Ribmaster in position, cast on 141 (147, 155, 161) stitches. Change to Tensions 4 Knitmaster and 6 Ribmaster and knit 36 rows in 1 × 1 rib. Change to Tensions 5 Knitmaster and 7 Ribmaster and, working in Brioche rib throughout, knit 270 (274, 280, 284) rows without shaping. (Adjust length at this stage, if desired.)

Shape raglan armholes. Cast off 4 (5, 6, 7) stitches at beginning of next 2 rows and decrease 1 stitch at beginning of next 2 (4, 8, 10) rows; knit 2 rows. Decrease 1 stitch at beginning of the next 2 rows and every following 3rd and 4th rows 4 (5, 5, 6) times altogether.*** *Knit 6 rows without shaping. Decrease 1 stitch at beginning of the next 2 rows and every following 3rd and 4th rows 4 times altogether.* Repeat the last 20 rows, from * to *, 7 more times. Knit 6 rows without shaping. Decrease 1 stitch at beginning of the next 2 rows and following 3rd and 4th rows (55 (55, 57, 57) stitches remain).

Shape neck. Using an odd length of main wool, cast off 23 (23, 25, 25) stitches in centre. Transfer stitches on Ribmaster at right on to their corresponding Needles on Knitmaster and push all 16 Needles into H.P. Using an odd length of different coloured wool, knit several rows over 16 stitches at left and release from the machine.

Knit the right part as follows:—With Cam Boxes at right, push Needles from H.P. into W.P. and transfer alternate stitches back on to the Ribmaster. Knit 1 row. **Cast off 5 stitches at beginning of next row and decrease 1 stitch at beginning of next row. Cast off 3 stitches at beginning of next row; knit 1 row. Cast off 2 stitches at beginning of next row and decrease 1 stitch at beginning of next row. Cast off 2 stitches at beginning of next row. Cast off remaining 2 stitches.**

Knit the left part as follows:—With Cam Boxes at right, replace 16 stitches from last row knitted in main wool back on to the Knitmaster and Ribmaster and knit 2 rows without shaping. Now follow instructions for right part from ** to **.

FRONT

Follow instructions for Back to ***.

Knit 6 rows without shaping. Decrease 1 stitch at beginning of the next 2 rows and every following 3rd and 4th rows 4 times altogether. Repeat the last 20 rows from * to * 6 more times.

Shape neck. Using an odd length of main wool, cast off 15 (15, 17, 17) stitches in centre. Transfer stitches on Ribmaster at right on to their corresponding Needles on Knitmaster and push all 26 Needles into H.P. Using an odd length of different coloured wool, knit several rows over 26 stitches at left and release from the machine.

Knit the right part as follows:—With Cam Boxes at right, push Needles from H.P. back into W.P. and transfer alternate stitches back on to the Ribmaster. Knit 1 row. ***Cast off 4 stitches at beginning of next row; knit 1 row. Cast off 3 stitches at beginning of next row; knit 1 row. Cast off 2 stitches at beginning of next row and decrease 1 stitch at beginning of next row. Cast off 2 stitches at beginning of next row; knit 1 row. *Decrease 1 stitch at beginning of next 3 rows; knit 1 row*. Repeat the last 4 rows, from * to *, once more. Decrease 1 stitch at beginning of next 2 rows; knit 2 rows. **Decrease 1 stitch at beginning of the next and following 4th row**. Repeat the last 5 rows, from ** to **, once more. Knit 1 row. Cast off remaining 2 stitches.***

Knit the left part as follows:—With Cam Boxes at right, replace 26 stitches from last row knitted in main wool back on to the Knitmaster and Ribmaster and knit 2 rows without shaping. Now follow instructions for right part from *** to ***.

SLEEVES

With Ribmaster in position, cast on 63 (65, 67, 69) stitches. Change to Tensions 4 Knitmaster and 6 Ribmaster and knit 36 rows in 1 × 1 rib. Change to Tensions 5 Knitmaster and 7 Ribmaster and, working in Brioche rib throughout, increase 1 stitch at beginning of the next 2 rows and every following 15th and 16th rows 19 times altogether; knit 2 (6, 6, 10) rows without shaping. Increase 1 stitch at beginning of the next 2 rows and every following 3rd and 4th rows 4 (6, 8, 10) times altogether (109 (115, 121, 127) stitches). Knit 4 (2, 4, 2) rows without shaping (346 (356, 366, 376) rows from beginning). (Knit 1 row extra for second Sleeve only.)

Shape raglan top. Cast off 4 (5, 6, 7) stitches at beginning

Continued on page 22

No Need to Look Downcast

in this Brioche rib sweater

of next 2 rows and decrease 1 stitch at beginning of next 2 (4, 8, 10) rows; knit 2 rows. Decrease 1 stitch at beginning of the next 2 rows and every following 3rd and 4th rows 4 (5, 5, 6) times altogether. *Knit 6 rows without shaping. Decrease 1 stitch at beginning of the next 2 rows and every following 3rd and 4th rows 4 times altogether. *Repeat the last 20 rows, from * to *, 3 more times. Knit 6 rows without shaping. Decrease 1 stitch at beginning of next 2 rows (57 stitches remain).
Divide work in centre by transferring the centre stitch on to its adjacent Needle. Transfer stitches on Ribmaster at right on to their corresponding Needles on Knitmaster and push all 28 Needles into H.P. Using an odd length of different coloured wool, knit several rows over 28 stitches at left and release from the machine.

Knit the right part as follows:—With Cam Boxes at right, push Needles from H.P. back into W.P. and transfer alternate stitches back on to the Ribmaster. Knit 2 rows. Decrease 1 stitch at beginning of the next and every following 4th row 3 times altogether. *Knit 6 rows without shaping. Decrease 1 stitch at beginning (left edge) of next row. Decrease 1 stitch at beginning of the next and every following 4th row 4 times altogether.* Repeat the last 20 rows, from * to *, 3 more times. Cast off 3 stitches at beginning (left edge) of next row. Cast off remaining 2 stitches.

Knit the left part as follows:—With Cam Boxes at right, replace 28 stitches from last row knitted in main wool back on to the Knitmaster and Ribmaster and knit 3 rows without shaping. Decrease 1 stitch at beginning of the next and every following 4th row 3 times altogether. **Knit 6 rows without shaping. Decrease 1 stitch at beginning (right edge) of next row. Decrease 1 stitch at beginning of the next and every following 4th row 4 times altogether.** Repeat the last 20 rows, from ** to **, twice more. Knit 6 rows without shaping. Decrease 1 stitch at beginning (right edge) of next row. Decrease 1 stitch at beginning of the next and following 4th row; knit 1 row. Cast off 2 stitches at beginning of the next and every following alternate row 3 times altogether. Fasten off remaining stitch.
Knit the second Sleeve but reverse the shapings by noting alteration in number of rows worked in reading left for right and vice versa.

NECKBAND
With Ribmaster in position, cast on 165 (165, 169, 169) stitches. Change to Tensions 5 Knitmaster and 7 Ribmaster and knit 8 rows in 1 × 1 rib. Change to Tensions 4 Knitmaster and 6 Ribmaster and knit 8 rows in 1 × 1 rib. Change to Tensions 3 Knitmaster and 5 Ribmaster and knit 20 rows in 1 × 1 rib. Change to Tensions 4 Knitmaster and 6 Ribmaster and knit 8 rows in 1 × 1 rib. Change to Tensions 5 Knitmaster and 7 Ribmaster and knit 8 rows in 1 × 1 rib. Cast off very loosely in rib by hand.

TO MAKE UP
Join together 2 parts of top of sleeves then join the raglan, side and sleeve seams, with longer raglan edges on sleeves at back; press seams lightly on the wrong side. Fold 1 × 1 rib at lower and sleeve edges in half and catch down cast-on edge on the inside. Join side edges of neckband and sew cast-on edge into position, fold in half and catch down cast-off edge on the inside. Lightly press all seams on the wrong side.

Boy's Ribmaster Sweater

Continued from page 17

crease 1 stitch at beginning of next row and cast off 3 stitches at beginning of next row; knit 1 row. *Cast off 2 stitches at beginning of next row and decrease 1 stitch at beginning of next row*. Repeat the last 2 rows from * to * twice more. Decrease 1 stitch at beginning of next row; knit 1 row. Decrease 1 stitch at beginning of next 7 rows.

5th size only. Decrease 1 stitch at beginning of next row and cast off 4 stitches at beginning of next row. Decrease 1 stitch at beginning of next row and cast off 3 stitches at beginning of next row. Decrease 1 stitch at beginning of next row. Cast off 2 stitches at beginning of the next and following alternate row. Decrease 1 stitch at beginning of next row and cast off 2 stitches at beginning of next row. Decrease 1 stitch at beginning of next 4 rows; knit 1 row. Decrease 1 stitch at beginning of next 7 rows.

All sizes. Knit 2 rows without shaping. Decrease 1 stitch at beginning of next 3 rows; knit 1 row. Decrease 1 stitch at beginning of next row; knit 1 row. Fasten off remaining 2 stitches.
Knit the left part as for right part but reverse the shapings by starting with Cam Box at right and noting alteration in number of rows worked.

SLEEVES (both alike)
With Ribmaster in position and using M, cast on 55 (57, 59, 61, 63) stitches. Change to Tensions 4 Knitmaster and 6 Ribmaster and knit 20 rows in 1 × 1 rib. Change to C and knit 4 rows in 1 × 1 rib. Change to M and knit 18 rows in 1 × 1 rib. Change to Tensions 6 Knitmaster and 8 Ribmaster. Working in 16 row pattern as given for Back and starting on row 5 (15, 7, 1, 11) increase 1 stitch at beginning of the next 2 rows and every following 7th and 8th rows 11 (13, 15, 17, 20) times altogether (77 (83, 89, 96, 103) stitches altogether). Knit 12 (16, 20, 22, 18) rows without shaping.

Shape raglan top. Keeping pattern correct, cast off 3 (3, 3, 3, 4) stitches at beginning of next 2 rows and 2 stitches at beginning of next 8 (8, 8, 10, 10) rows. Decrease 1 stitch at beginning of next 2 (8, 8, 4, 10) rows.* Knit 2 rows without shaping. Decrease 1 stitch at beginning of next 6 rows.* Repeat the last 8 rows, from * to *, 6 (6, 7, 8, 8) more times. Cast off remaining 11 stitches.

NECKBAND
With Ribmaster in position and using M, cast on 117 (121, 127, 131, 137) stitches. Change to Tensions 5 Knitmaster and 7 Ribmaster and knit 6 rows in 1 × 1 rib. Change to Tensions 4 Knitmaster and 6 Ribmaster and knit 8 rows. Change to C and knit 4 rows. Change to M and knit 6 rows. Change to Tensions 5 Knitmaster and 7 Ribmaster and knit 6 rows. Cast off very loosely.

TO MAKE UP
Join the raglan, side and sleeve seams matching the stripes, press seams lightly on the wrong side. Fold 1 × 1 ribbing in half at lower and sleeve edges and catch down on the inside. Join side edges of neckband and sew cast-off edge into position; fold in half and catch down on the inside. Lightly press all seams.

Man's Lumber Jacket

Continued from page 5

TO MAKE UP

Neatly join the 2 halves of back, sleeves and collar together, taking half a stitch into each seam. Pin out each piece to size and press very lightly on the wrong side with a hot iron over a damp cloth, omitting the collar. Join the side and sleeve seams; press. Set in sleeves and join sleeve extensions to shoulder edges of back and fronts; press. Sew cast-off edge of collar into position, as shown. Turn up 2 rows along lower and sleeve edges and face with bias binding, pulling in as required. Sew in zip fastener beginning at neck edge and ending approximately 1-inch from lower edge. Give final pressing.

FAMILY PLANNING

Write for our free *booklet* sent in a plain sealed envelope with discount price list and details of our Confidential Postal Service for all Family Planning requisites.

PREMIER LABORATORIES LTD.
325 BLACK LION STREET, BRIGHTON

FOLLOW THE PATTERN WITH

Poppleton
Knitting Wools

There are no better wools for hand or machine knitting than Poppleton. They're soft, smooth and strong and in a marvellous range of colours.

NEVADA *100% Pure Botany Wool 3 & 4 ply*
DEFIANCE *3 & 4 ply Fingering*
DEFIANCE *Double Knitting*
VISCOUNT *Double Knitting*
VISCOUNT *3 & 4 ply Knitting*

All availabe in 1 oz. balls. Supplies to retail shops only. For names of local stockists write to

RICHARD POPPLETON & SONS LTD.
Dept. M.K. ALBERT MILLS HORBURY YORKSHIRE
Telephone Horbury 888

Poppleton for Preference

New Twinmatic Leaflets

obtainable from the Pattern Dept., 18 Cavendish Square, London, W.1 (minimum order 3/6d.)

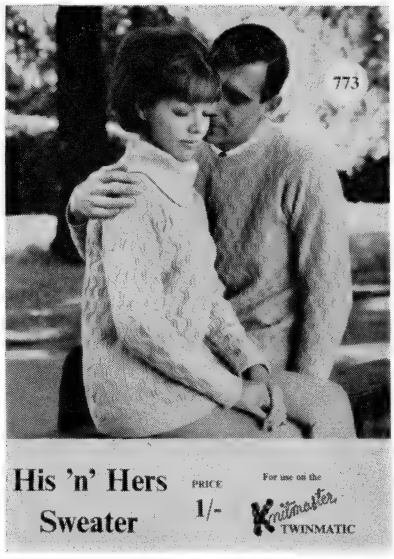

For Knitmasters with 168 Needles or more.

MATERIALS: Jacket. 13 (13, 14, 14, 15) oz. Hayfield Birch 4-ply wool in main colour; 3 yd. bias binding; 8 buttons; crochet hook.
Skirt 10 (10, 11, 11, 12) oz. Hayfield Birch 4-ply wool in main colour; 2 yd. bias binding; elastic for waist.

MEASUREMENTS: Jacket. To fit a 36 (38, 40, 42, 44) inch bust (actual garment measures 38 (40, 42, 44, 46) inches; length at centre back, 23 (23½, 24, 24½, 25) inches (adjustable); sleeve seam, 17 (17¼, 17¼, 17½, 17¾) inches (adjustable).
Skirt. To fit 37 (39, 41, 43, 45) inch hips (actual garment measures 38 (40, 42, 44, 46) inches); completed length without waistband, 24¼ (24½, 24¾, 25, 25¼) inches (adjustable).

TENSION: 7 stitches and 10 rows to 1 inch.

ABBREVIATIONS: H.P., Holding Position; W.P., Working Position.

NOTES: Figures in brackets refer to the larger sizes respectively.
Decreasings on skirt should be worked 30 stitches in by transferring the 31st stitch on to the 32nd Needle and moving 30 end stitches 1 Needle in.

JACKET

BACK

Using M, cast on 135 (142, 149, 156, 163) stitches. Change to Tension 7 and knit 150 (154, 158, 162, 168) rows without shaping.
Shape armholes. Cast off 3 (3, 3, 4, 4) stitches at beginning of the next 2 rows, 3 stitches at beginning of the next 2 (4, 6, 6, 8) rows, 2 stitches at beginning of the next 8 (6, 4, 4, 4) rows and decrease 1 stitch at beginning of the next 10 (10, 12, 14, 12) rows. Knit 50 (50, 50, 48, 48) rows without shaping.
Shape shoulders. Cast off 7 stitches at beginning of the next 0 (4, 4, 6, 8) rows and 6 stitches at beginning of the next 10 (6, 6, 4, 2) rows. Cast off remaining 37 (38, 41, 42, 43) stitches.

RIGHT FRONT

Cast on 69 (72, 76, 79, 83) stitches. Change to Tension 7 and knit 133 (137, 141, 145, 151) rows without shaping. (Knit 1 row extra for Left Front only.) (Cam Box is at left.)
Shape bust darts. Always taking wool round the end Needle in H.P., push 6 Needles opposite Cam Box end into H.P. on the next and every following alternate row 4 times altogether; knit 1 row. Always taking wool round end Needle in H.P., push 6 Needles opposite Cam Box end from H.P. back into W.P. on the next and every following alternate row 4 times altogether. Knit 11 rows without shaping.
Shape neck. Decrease 1 stitch at beginning of the next and following 4th row.
Shape armhole. Decreasing 1 stitch (at neck edge) at beginning of the 4th row and every following 4th row 18 (18, 20, 20, 21) times altogether, *at the same time*, cast off 3 (3, 3, 4, 4) stitches at beginning of the next row; knit 1 row. Cast off 3 stitches at beginning of the next and every following alternate row 1 (2, 3, 3, 4) times altogether; knit 1 row. Still decreasing at neck edge as before, cast off 2 stitches at beginning of the next and every following alternate row 4 (3, 2, 2, 2) times altogether; knit 1 row. Decrease 1 stitch at beginning of the next and every following alternate row 5 (5, 6, 7, 6) times altogether. Still decreasing at neck edge as before, knit 53 (53, 53, 51, 51) rows.
Shape shoulder. Still decreasing at neck edge as before 0 (0, 2, 2, 3) more times, cast off 6 (7, 7, 7, 7) stitches at beginning of the next and following alternate row; knit 1 row. Cast off 6 (6, 6, 7, 7) stitches at beginning of the next row; knit 1 row. Cast off 6 (6, 6, 6, 7) stitches at beginning of the next row; knit 1 row. Cast off remaining 6 stitches.

LEFT FRONT

Follow instructions for Right Front reversing the shapings by noting alteration in number of rows worked and reading right for left.

SLEEVES (both alike)

Cast on 55 (57, 58, 60, 62) stitches. Change to Tension 7 and knit 4 rows. Increase 1 stitch at beginning of the next 2 rows and every following 6th and 7th (6th and 7th, 6th and 7th, 6th and 7th, 5th and 6th) rows 23 (23, 24, 25, 26) times altogether (101 (103, 106, 110, 114) stitches. Knit 12 (14, 7, 4, 24) rows without shaping (172 (174, 174, 178, 180) rows from beginning). (Adjust length at this stage, if desired.)
Shape top. Cast off 4 (5, 5, 5, 5) stitches at beginning of the next 2 rows, 3 stitches at beginning of the next 6 rows, 2 stitches at beginning of the next 4 (2, 0, 4, 8) rows and decrease 1 stitch at beginning of the next 22 (26, 30, 26, 22) rows. Cast off 2 stitches at beginning of the next 6 rows and 4 stitches at beginning of the next 6 rows. Cast off remaining 9 (9, 12, 12, 12) stitches.

FRONT OVERLAP

Cast on 19 stitches. Change to Tension 5 and, dropping every alternate stitch at convenient intervals and picking up as for ribbing knit, 150 (154, 160, 166, 170) rows. Cast off.

Continued on page 27

This suit is in stocking stitch with a plain vee neckline which lends itself to an assortment of pretty colours

Ski Outfit

Continued from page 9

binding, press. Cut 2 pieces of elastic to fit wrists and join ends. Fold up 3 rows along sleeve edges over elastic and catch down cast-on edge on the inside. Cut a length of elastic to fit hips, join ends and turn up a hem along lower edge over elastic as on sleeves. Thread cord in cross-stitch pattern along centre front and back seams on main part and collar and tie ends in a bow at lower front edge as shown. Give final pressing.

HAT (4 pieces)

First piece. Using M, cast on 28 stitches *on alternate Needles*. Change to Tension 9 and knit 15 rows without shaping. Slip stitches on to a stitch holder. With Cam Box at right, replace stitches back on to the machine with the plain side facing. Change to C and knit 22 rows without shaping. (Adjust length of Hat at this stage, if desired.) Decrease 1 stitch at beginning of the next 2 rows and following 3rd and 4th rows; knit 2 rows without shaping. Decrease 1 stitch at beginning of next 8 rows and cast off 2 stitches at beginning of next 6 rows. Cast off remaining 4 stitches.

Second piece. Follow instructions for first piece.

Third and fourth pieces. Follow instructions for first piece but use C instead of M, and vice versa.

TO MAKE UP

Press each piece carefully with a hot iron over a damp cloth. Join 4 pieces together along shaped side edges placing M to C and vice versa throughout. Turn back brim for 2½ inches and face cast-on edge with bias binding; press. Cut a length of elastic to fit head and herringbone stitch into position along fold under brim. Thread cord in cross-stitch pattern along seams and tie 2 ends in a bow at centre.

MITTENS

Right mitten. First half. Using M, cast on 21 stitches *on alternate Needles*. Change to Tension 9 and knit 22 rows without shaping. Slip stitches on to a stitch holder. Push up 18 *alternate* Needles into W.P. and, with purl side facing, replace stitches from stitch holder back on to these Needles as follows:—1 stitch on to each of the first 3 Needles, *2 stitches together on to the next Needle and 1 stitch on to each of the next 4 Needles*. Repeat from * to * to end. Change to C and knit 1 row. Make a row of eyelet holes by transferring the 2nd and every following 3rd stitch on to its adjacent Needle.*** With all Needles in W.P. and all Latches open, knit 13 rows without shaping. ****Divide work in centre and slip 9 stitches at left on to a stitch holder.

Thumb opening. Using an odd length of different coloured wool, knit 6 stitches at left by hand as for a buttonhole.

**Knit 25 rows without shaping. (Adjust length at this stage, if desired.) (Cam Box is at left.)

Shape top. Decrease 1 stitch at beginning of next row; knit 3 rows. Decrease 1 stitch at beginning of the next and every following alternate row 3 times altogether; knit 1 row. Cast off 2 stitches at beginning of next row. Cast off remaining 3 stitches.**

Thumb. Pull out length of different coloured wool and slip 6 stitches from both edges of thumb opening on to 2 stitch holders. Push up 13 *alternate* Needles into W.P. With purl side facing, place 6 stitch loops from each stitch holder on to 6 Needles at each side, pick up a loop from the row below and place it on to the empty Needle in centre. Join in C and still at Tension 9 knit 16 rows. Slip stitches on to a stitch holder. Break off wool and thread end through all stitches, draw up and fasten off.****

With Cam Box at left, replace 9 stitches from stitch holder back on to the machine and follow instructions from ** to ** but read right for left.

Right mitten. Second half. Follow instructions for right mitten first half but read C for M and vice versa and omit the thumb and thumb opening.

Left mitten. First half. Follow instructions for right mitten first half to ***, but read C for M and vice versa.

With all Needles in W.P. and all Latches open, knit 12 rows without shaping.

Now follow instructions for right mitten first half from **** to ****, but read right for left.

With Cam Box at right, replace 9 stitches from stitch holder back on to the machine and follow instructions for right mitten first half from ** to **.

Left mitten. Second half. Follow instructions for right mitten first half but omit the thumb and thumb opening.

TO MAKE UP

Press each piece carefully with a hot iron over a damp cloth. Join the 2 halves of each mitten along centre front and back seams, then join the top and thumb seams; press. Face cast-on edges with bias binding; press. Thread cord in cross-stitch pattern along centre back seams as shown, and tie 2 ends in a bow at wrist as shown. Cut 2 lengths of elastic to fit wrists, thread through eyelet holes and join ends. Give final pressing.

SOCKS (both alike)

Using C, cast on 26 stitches on *alternate* Needles. Change to Tension 9 and knit 21 rows without shaping. Slip stitches on to a stitch holder. With Cam Box at right and *plain* side facing, push up 22 *alternate* Needles into W.P. and replace stitches from stitch holder back on to these Needles as follows:—1 stitch on to each of the first 3 Needles*, 2 stitches together on to the next Needle and 1 stitch on to each of the next 4 Needles*. Repeat from * to * all along the row, ending with 1 stitch on to each of the last 3 Needles. Change to M and knit 24 rows without shaping.

Shape heel. Always taking wool round the first inside Needle in H.P., push 2 Needles opposite Cam Box end into H.P. on the next 4 rows and 1 Needle on next 8 rows. Push 1 Needle opposite Cam Box end from H.P. back into W.P. on the next 8 rows and 2 Needles on next 4 rows. Knit 40 rows without shaping. (Adjust length of sole at this stage, if desired.)

Shape toe. Always taking wool round the first inside Needle in H.P., push 2 Needles opposite Cam Box end into H.P. on the next 4 rows and 1 Needle on next 8 rows. Change to C and push 1 Needle opposite Cam Box end from H.P. back into W.P. on the next 8 rows and 2 Needles on next 4 rows. Knit 66 rows without shaping. (Adjust length of instep as sole at this stage, if desired.) Slip stitches on to a stitch holder. With Cam Box at left replace stitches back on to the machine with the plain side of instep facing. Change to M and increase 1 stitch at both edges (24 stitches). Knit 21 rows without shaping. Cast off loosely.

TO MAKE UP
Press each piece carefully with a hot iron over a damp cloth. Join the side seams and press. Face the cast-on and cast-off edges with bias binding; press and turn over tops. Thread cord in cross-stitch pattern along outer edges of tops as shown. Give final pressing.

Four-piece Outfit

Continued from page 15

as follows:—1 stitch on to each of the first 9 Needles, **2 stitches together on to the next Needle and 1 stitch on to each of the next 10 Needles**. Repeat from ** to ** to end. Change to Tension 6 and knit 10 rows without shaping. Change to Tension 5 and knit 10 rows without shaping. Change to Tension 6 and knit 5 rows without shaping. Change to Tension 7 and knit 5 rows. Change to Tension 8 and knit 12 rows without shaping. Cast off very loosely.

TO MAKE UP
Press each piece carefully with a hot iron over a damp cloth. Join the shoulder, side and sleeve seams and press. Set in sleeves; press. Turn up 19 rows along lower and sleeve edges and catch down on the inside; press. Join the side edges of collar and sew cast-off edge into position with seam at centre back. Turn up 5 rows along cast-on edge of collar and catch down on the inside. Give final pressing.

"KNITABLE"
PORTABLE TABLES
for Single bed machines 79/6
for Double bed machines 99/6
Carriage paid excluding Ireland

The Original "KNITABLE" is the practical answer to the machine knitter's needs. Rigid construction, correct height, and when not in use, it folds flat for easy storage.

Available from your local suppliers—in case of difficulty contact:
W. G. FULLER LTD., Grafton Works, Grafton Street, High Wycombe, Bucks. *Tel.: High Wycombe 415*

Lady's Suit

Continued from page 24

TO MAKE UP
Press each piece carefully with a hot iron over a damp cloth, omitting the ribbing. Join the shoulder, side and sleeve seams; press. Set in sleeves and press. Turn up 2 rows along lower and sleeve edges and face with bias binding; press. Face front edge with bias binding; press. Crochet 8 chains for buttonloops on the right front from the lower edge to the beginning of the shaping. Sew buttons on edge of left front to correspond. Sew overlap to underside of left front half inch from the edge to back button fastening. Give final pressing.

SKIRT

BACK AND FRONT (both alike)
Cast on 127 (135, 141, 147, 155) stitches. Change to Tension 7 and knit 30 rows. Increase 1 stitch at beginning of the next 2 rows and every following 29th and 30th row 4 times altogether (135 (143, 149, 157, 163) stitches). Knit 80 (82, 86, 88, 90) rows without shaping (202 (204, 208, 210, 212) rows from beginning). (Adjust length at this stage, if desired.)

Shape to waist. Decrease 1 stitch at beginning and 1 stitch 30 stitches in (see Notes) on the next 2 rows and every following 4th and 5th rows 9 times altogether (99 (107, 113, 121, 127) stitches remain).

Waistband. Change to Tension 5 and knit 12 rows. Drop every alternate stitch 12 rows down and pick up as for ribbing. Cast off loosely, in rib by hand.

TO MAKE UP
Press each piece carefully with a hot iron over a damp cloth, omitting the ribbing. Join side seams and press. Turn up 2 rows along lower edge and face with bias binding; press. Herringbone-stitch elastic on to waistband. Give final pressing.

KNITTING WOOLS

Prompt Postal Service

"Dapple" Double Knitting	1/- oz.
3 and 4 ply Fingering Wool	1/- oz.
Double Knitting Wool	11d. oz.
D.K. Crepe (All Wool)	1/4 oz.
3 ply and D.K. Nylon	1/6 oz.
Quick to Knit Wool	1/3 oz.
D.K. Fancy Fleck	1/3 oz.
2 ply Baby Wool	1/2 oz.

Send 2½d. Stamp to Shadecard Department MK
BELMONT KNITTING WOOLS LTD.
Belmont Mills, Burnett Street, Bradford, 1, Yorks.

For Double Bed machines

Men's Pullovers

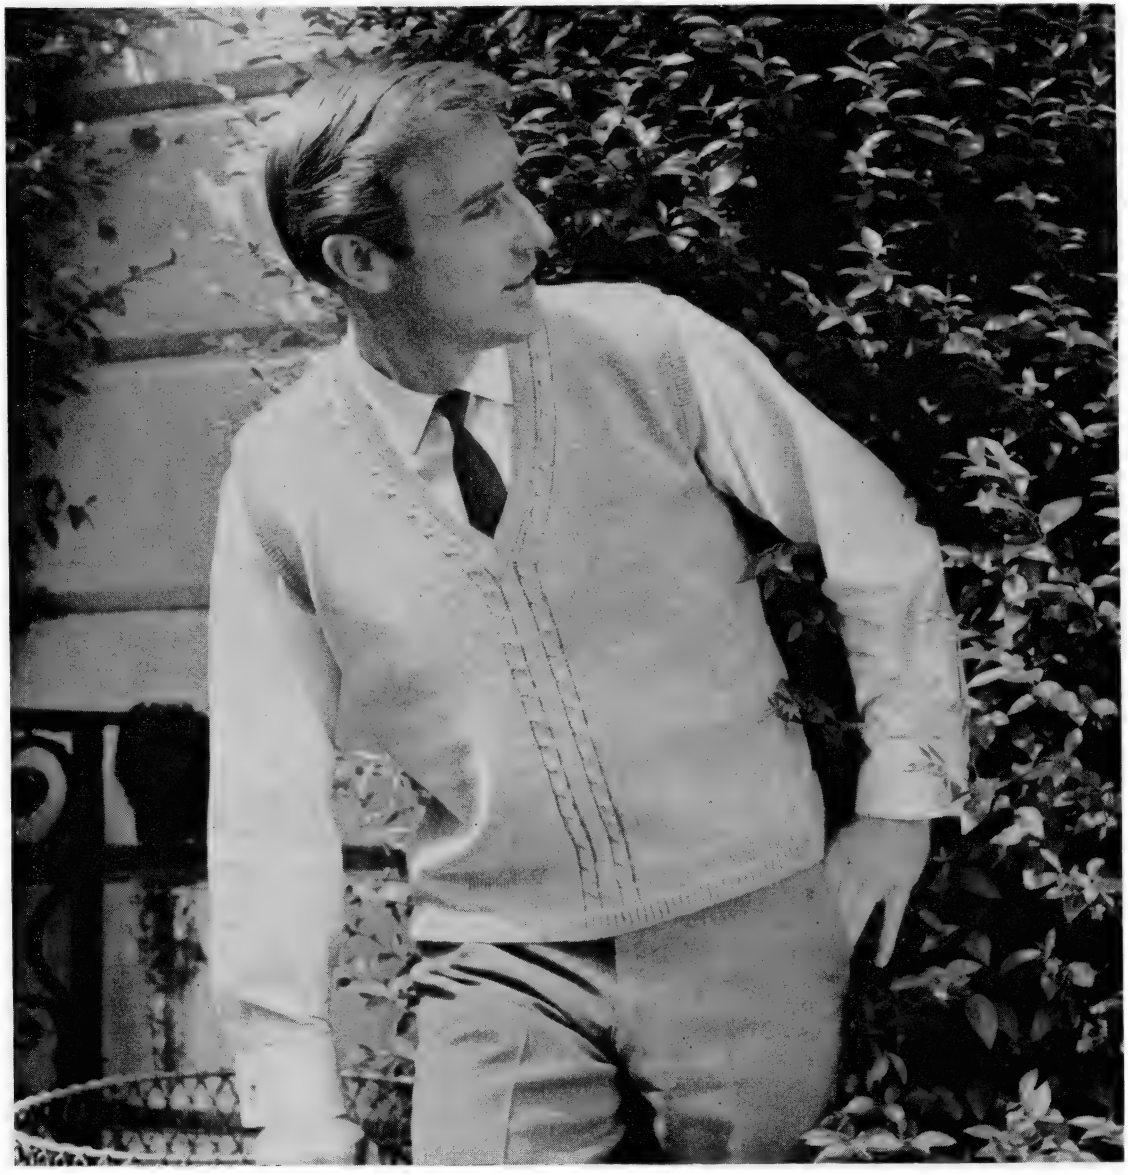

An attractive cable design featuring 3-ply wool . . .

For the Twinmatic Double Bed machine.

MATERIALS: 6 (7, 7, 7, 8) oz. Ladyship Champion 3-ply botany wool; 2 Double Transfer Tools.

MEASUREMENTS: To fit a 36 (38, 40, 42, 44) inch chest (actual garment measures 38 (40, 42, 44, 46) inches); length at centre back without neckband, 23 (23½, 24, 24½, 25) inches (adjustable).

TENSION: 8 stitches and 11 rows to 1 inch measured over stocking stitch.

ABBREVIATIONS: W.P., Working Position; N.W.P., Non-Working Position; H.P., Holding Position; U.W.P., Upper Working Position; R.W., Racking Wheel; R.B., Rear Bed; F.B., Front Bed.

NOTES: Figures in brackets refer to the larger sizes respectively.
Decreasings at vee-neck: Counting Needle in N.W.P. as stitches, move the 8 end stitches 1 Needle in. Push empty Needle down into N.W.P.
Instructions for the Swiftomatic Double Bed machine.
R.W.=Racking Knob; R.W. on ½=Racking Knob on 0; U.W.P.=Semi-Automatic Return Position.
Tensions: $\frac{N.1.}{N.1.} = \frac{11\ N\ 11}{11\ N\ 11}$. *Stocking stitch: N.6.=* 6½ *N* 6½; *N.5.=*7½ *N* 7½; *N.4.=*8½ *N* 8½.

BACK
R.W. on ½. Setting $\frac{\text{R.B. N.1.}}{\text{F.B. N.1.}}$ 1 . 1 . 1 . 1 . 1
Cast on 77 (81, 85, 89, 93) stitches on F.B. and 76 (80, 84, 88, 92) stitches on R.B. in every other Needle rib (153 (161, 169, 177, 185) stitches altogether). Knit 1 circular row. Reset Controls to N and set Row Counter at 0. Knit 12 rows. Transfer to stocking stitch. Change to Tension 6. *Knit without shaping until 150 (154, 158, 162, 166) rows show on Row Counter. (Slide is at left.) (Adjust length at this stage, if desired.)
Shape armholes. Cast off 7 (8, 9, 10, 11) stitches at beginning of next 2 rows. (Slide is at left.) Decrease 1 stitch at beginning of next 10 rows. Decrease 1 stitch at beginning of next 2 rows and every following 3rd and 4th rows 9 times altogether (196 (200, 204, 208, 212) rows from 0). Knit 52 (54, 56, 58, 60) rows without shaping (248 (254, 260, 266, 272) rows from 0).
Shape shoulders. Always taking wool round first inside Needle in H.P., push 10 (11, 12, 12, 13) Needles at opposite end to Slide into H.P. on the next 4 rows. With all Latches open, push Needles at opposite end to Slide from H.P. down into U.W.P. on the next 2 rows. Cast off.

FRONT
Follow instructions for Back to *.
Counting from both edges, transfer the 69th and 74th (73rd and 78th; 77th and 82nd; 81st and 86th; 85th and 90th) stitches on to their adjacent Needles. Push empty Needles down into N.W.P. but count them as stitches throughout. **Knit 10 rows. Using Double Transfer Tools and counting from both edges, cross stitches 70 and 71 with stitches 72 and 73 (74 and 75 with stitches 76 and 77; 78 and 79 with stitches 80 and 81; 82 and 83 with stitches 84 and 85; 86 and 87 with stitches 88 and 89).** The last 10 rows from ** to ** form 1 complete pattern which should be repeated throughout. Knit in cable pattern without shaping until 150 (154, 158, 162, 166) rows show on Row Counter. (Slide is at left.) (Adjust length at this stage, if desired.)
Shape armholes. Keeping pattern correct, cast off 7 (8, 9, 10, 11) stitches at beginning of next 2 rows. (Slide is at left.)
Shape neck. Transfer the centre stitch on to its adjacent Needle. Push 69 (72, 75, 78, 81) Needles at right into H.P.
Knit the left half as follows:—Decreasing 1 stitch at neck edge (see Notes) on the next and every following 4th row, *at the same time*, decrease 1 stitch at armhole edge on the next and every following alternate row until 61 (64, 67, 70, 73) stitches remain. Knit 1 row (162 (166, 170, 174, 178) rows from 0). Still decreasing at neck edge as before, decrease 1 stitch at beginning (armhole edge) of next and every following 4th row until 44 (47, 50, 53, 56) stitches remain (195 (199, 203, 207, 211) rows from 0). Knit 1 row. Keeping armhole edge straight, continue decreasing at neck edge as before until 31 (33, 36, 38, 40) stitches remain (245 (253, 257, 265, 273) rows from 0).
Shape shoulder. Always taking wool round first inside Needle in H.P., push 10 (11, 12, 12, 13) Needles at opposite end to Slide into H.P. on the next 2 alternate rows. With all Latches open, push Needles at opposite end to Slide from H.P. down into U.W.P., knit 1 row. Cast off.
Knit the right half as for left half, but reverse the shapings by starting with Slide at right.

NECKBAND (2 pieces)
Using R.B. only cast on 96 (98, 100, 102, 104) stitches. Change to Tension 5 and set Row Counter at 0. Knit 1 row. Decrease 1 stitch at left edge of next 8 rows, knit 1 row. Increase 1 stitch at left edge by transferring the end stitch 1 Needle out (lift up the loop which lies below the stitch on the second Needle and place this on the empty Needle) of next 8 rows. Knit 1 row. Cast off loosely.
Knit the second piece as for first piece but reverse the shapings by reading right for left.

ARMBANDS (2 alike)
Using R.B. only, cast on 132 (136, 140, 144, 148) stitches. Change to Tension 6 and knit 3 rows. Change to Tension 5; knit 3 rows. Change to Tension 4; knit 6 rows. Change to Tension 5; knit 3 rows. Change to Tension 6; knit 3 rows. Cast off loosely.

TO MAKE UP
Press each piece carefully with a hot iron over a damp cloth, omitting the ribbing. Join the shoulder and side seams; press. Join narrow ends of neckband and sew cast-off edge into position with mitre at centre front. Fold in half and catch down on the wrong side. Join narrow ends of armbands and sew cast-off edge into position; fold in half and catch down on the inside. Give final pressing.

. . . *in 4-ply wool a striking rib pattern*

For the Twinmatic Double Bed machine.

MATERIALS: 10 (11, 11, 12, 12) oz. Ladyship Champion 4-ply botany wool.

MEASUREMENTS: To fit a 36 (38, 40, 42, 44) inch chest (actual garment measures 37½ (40½, 42, 43½, 45) inches; length at centre back without neckband, 23 (23½, 24, 24½, 25) inches (adjustable).

TENSION: 8 stitches (on R.B. only) and 13 rows to 1 inch, when slightly stretched out sideways.

ABBREVIATIONS: W.P., Working Position; N.W.P., Non-Working Position; H.P., Holding Position; U.W.P., Upper Working Position; R.B., Rear Bed; F.B., Front Bed; R.W., Racking Wheel.

NOTES: Figures in brackets refer to the larger sizes respectively.
The casting-off and decreasing is given for R.B. only, the F.B. stitches being cast-off or decreased automatically as they occur to keep the pattern correct.
Instructions for the Swiftomatic Double Bed machine: R.W. = Racking Knob; R.W. on ½ = Racking Knob on 0; U.W.P. = Semi-Automatic Return Position.

Tensions: $\frac{N.1.}{N.1.} = \frac{11\ N\ 11}{11\ N\ 11}$ $\frac{N.2.}{N.2.} = \frac{10\ N\ 10}{10\ N\ 10}$ $\frac{N.4.}{P.3.} = \frac{8\ N\ 8}{9\ F\ 9}$

Stocking stitch: *N.6.* = 6 *N* 6. *N.7.* = 5 *N* 5. *N.5.* = 7 *N* 7.

BACK
R.W. on ½.
Setting $\frac{\text{R.B. N.1.}}{\text{F.B. N.1.}}$ 1 . 1 . 1 . 1 . 1 . 1 . 1 . 1
Cast on 76 (82, 85, 88, 91) stitches on F.B. and 77 (83, 86, 89, 92) stitches on R.B. in every other Needle rib. Knit 1 circular row. Change setting to $\frac{N.2.}{N.2.}$ and set Row Counter at 0. Knit 12 rows. On F.B. only transfer the 2nd and 3rd and every following 2nd and 3rd stitches on to empty Needles on back Bed. Bring up remaining empty Needles on back Bed and fill by placing bar of adjacent stitch on to empty Needle. Push empty Needles on F.B. down into N.W.P. At left on R.B. only decrease 1 stitch. Move R.W. to 1 and change setting to $\frac{N.5.}{P.3.}$ Move R.W. to 1. Push empty Needle on R.B. into W.P. and knit 1 circular row. On F.B. transfer to 2nd and 3rd and every following 2nd and 3rd stitches on to their adjacent Needles on R.B. Push empty Needles on F.B. down into N.W.P. Reset Controls to N and decrease 1 stitch on R.B. only at beginning of next row. (There are 152 (164, 170, 176, 182) stitches on R.B.) Change setting to $\frac{N.4.}{P.3.}$ Knit without shaping until 178 (182, 186, 192, 196) rows show on Row Counter. (Slide is at left.) (Adjust length at this stage, if desired.)

Shape armholes. Cast off 6 (8, 8, 8, 8) stitches at beginning of next 2 rows. Decrease 1 stitch at beginning of next 6 rows. (Slide is at left.)* Decrease 1 stitch at beginning of next 2 rows and every following 3rd and 4th rows 9 times altogether. Knit 72 (74, 76, 78, 80) rows without shaping (292 (298, 304, 312, 318) rows from 0).

Shape shoulders. Always taking wool round first inside Needle in H.P., push 8 (9, 9, 10, 10) Needles at opposite end to Slide into H.P. on the next 6 rows. With all Latches open, push Needles at opposite end to Slide from H.P. down into U.W.P. on the next 2 rows. Cast off.

FRONT
Follow instructions for Back to *.

Shape neck. Push 67 (71, 74, 77, 80) Needles at right into H.P.

Knit the left half as follows:—**Decrease 1 stitch at both ends of next and every following 4th row 9 times altogether (49 (53, 56, 59, 62) stitches on R.B.). Keeping armhole edge straight, continue decreasing at neck edge as before until 33 (35, 37, 39, 42) stitches remain on R.B. Knit 10 (4, 2, 0, 2) rows without shaping. (Slide is at right.)

Shape shoulder. Always taking wool round first inside Needle in H.P., push 8 (9, 9, 10, 10) Needles at opposite end to Slide into H.P. on the next and following alternate row. Knit 1 row. Push Needles at opposite end to Slide from H.P. down into U.W.P. and, with all Latches open, knit 1 row. Cast off.** With Slide at left push empty Needles from H.P. down into U.W.P. and, with all Latches open, knit the row. Now follow instructions for left half from ** to **, but reverse the shaping by reading left for right.

NECKBAND (2 pieces)
Using R.B. only, cast on 88 (90, 92, 94, 96) stitches. Change Tension to 6 and set Row Counter at 0. Knit 1 row. Decrease 1 stitch at left edge of next 8 rows. Knit 1 row. Increase 1 stitch at left edge by transferring the end stitch 1 Needle out, lift up the loop which lies below the stitch on the second Needle and place this on the empty Needle of the next 8 rows. Knit 1 row. Cast off loosely.
Knit the second piece as for first piece but reverse the shapings by reading right for left.

ARMBANDS (2 alike)
Using R.B. only, cast on 120 (122, 124, 126, 128) stitches. Set Row Counter at 0 and change Tension to 7, knit 3 rows. Change Tension to 6 and knit 3 rows. Change Tension to 5 and knit 6 rows. Change Tension to 6 and knit 3 rows. Change Tension to 7 and knit 3 rows. Cast off loosely.

TO MAKE UP
Join the shoulder and side seams; press. Join narrow ends of neckband and sew cast-off edge into position with mitre at centre front. Join ends of armbands and sew cast-off edges into position; press. Fold armbands and neckband over to the wrong side and catch down. Give final pressing.

For the ladies' . . .

For Double Bed machines

A Delightful Party Dress

with or without sleeves

For the Twinmatic Double Bed machine.

MATERIALS: Dress with three quarter length sleeves. 21 (22, 23) oz. Listers Lavenda 3-ply Crisp Crepe; 20-inch Lightning zip fastener; ¾-inch wide tape for waist. **Sleeveless dress.** 18 (19, 20) oz. Listers Lavenda 3-ply Crisp Crepe; 20-inch Lightning zip fastener; ¾-inch wide tape for waist; 1 yd. bias binding.

MEASUREMENTS: To fit a 34 (36, 38) inch bust (actual garment measures approximately 36 (38, 40) inches; length of bodice back from top of shoulder, 17 (17¼, 17½) inches (adjustable); completed length of skirt, 24½ (25, 25½) inches (adjustable); sleeve seam without cuff, 13 inches.

TENSIONS: 14 stitches and 12 rows to 1 inch measured over every Needle rib; counting Needles in R.P. as stitches, 8 stitches (on R.B. only) and 11½ rows to 1 inch measured over lacy pattern when stretched sideways.

ABBREVIATIONS: R.P., Rest Position; H.P., Holding Position; U.W.P., Upper Working Position; R.B. Rear Bed; F.B., Front Bed; R.W., Racking Wheel.

NOTES: Figures in brackets refer to the larger sizes respectively.

Skirt and sleeves. The casting-off and decreasings are given for R.B. only (count Needles in R.P. as stitches), the F.B. stitches being cast-off or decreased automatically as they occur. (Do not have end Needles on F.B.). When casting-off always work 1 chain in spaces where Needles are in R.P.

Instructions for the Swiftomatic Double Bed machine. R.W.=Racking Knob; R.W. on ½=Racking Knob on 0; controls=Automatic selectors; R.P.=non-working position; U.W.P.=Semi-Automatic Return Position.

Tensions: $\frac{N.4.}{N.4.} = \frac{10\ N\ 10}{10\ N\ 10}$ $\frac{N.5.}{N.5.}$ 9 N 9

$\frac{N.8.}{N.8.} = \frac{6\ N\ 6}{6\ N\ 6}$

$\frac{N.8.}{F.8.} = \frac{6\ N\ 6}{6\ D\ F\ 6}$ *Stocking stitch* N.7. 7 N 7

Circular Knitting R.7. 11 C 7

R.7. 7 C 11

DRESS WITH THREE-QUARTER LENGTH SLEEVES

BODICE FRONT

R.W. on 1. Setting $\frac{\text{R.B. N.4.}}{\text{F.B. N.4.}}$ 1 1 1 1 1 1

Cast on 114 (121, 128) stitches on each Bed in every Needle rib (228 (242, 256) stitches altogether. Knit 1 circular row. Set Row Counter at 0, reset Controls to N and knit 20 rows. Reset Controls to $\overline{\text{N.5.}}$. Increase 1 stitch on each Bed at beginning of the next 2 rows, and every following 11th and 12th rows 7 times altogether (128 (135, 142) stitches on each Bed). Knit 10 rows without shaping (104 rows from 0).

Shape bust darts. Always taking crepe round the first inside Needle in H.P., push 5 Needles on each Bed at opposite end to Slide into H.P. on the next 16 rows. With all Latches open, push 20 inside Needles on each Bed at opposite end to Slide from H.P. down into U.W.P. on the next 4 rows. Knit 12 rows without shaping (136 rows from 0).

Shape armholes. Cast off 4 (5, 6) stitches on each Bed at beginning of next 2 rows. Decrease 1 stitch on each Bed at beginning of next 6 (8, 10) rows. Decrease 1 stitch on each Bed at beginning of next 2 rows and every following 3rd and 4th rows 5 times altogether (104 (107, 110) stitches remain on each Bed). Knit 26 (26, 28) rows without shaping. (Slide is at left.)

Shape neck. Using an odd length of crepe cast off 28 (31, 34) stitches on each Bed in centre. Push 38 Needles on each Bed at right into H.P.

Knit the left half as follows:—*Knit 1 row. Decrease 1 stitch on each Bed at neck edge of next 10 rows. Decrease 1 stitch on each Bed at beginning of next and every following alternate row 10 times altogether (18 stitches remain on each Bed). Knit 8 rows without shaping.

Shape shoulder. Cast off 9 stitches on each Bed at beginning of next row; knit 1 row. Cast off remaining 9 stitches on each Bed.* With Slide at right and all Latches open, push Needles from H.P. down into U.W.P. Now knit the right half as for left half from * to *.

HALF BODICE BACK (both alike)

Set up machine as for Bodice Front.

Cast on 57 (60, 64) stitches on each Bed in every Needle rib (114 (120, 128) stitches altogether). Knit 1 circular row. Set Row Counter at 0, reset Controls to N and knit 20 rows. Reset Controls to $\overline{\text{N.5.}}$. Increase 1 stitch on each Bed at beginning of next and every following 12 th row 7 times altogether (64 (67, 71) stitches on each Bed). Knit 25 rows without shaping. (Slide is at left.)

Shape armhole. Cast off 4 (5, 6) stitches on each Bed at beginning of next row; knit 1 row. Decrease 1 stitch on each Bed at beginning of next and every following alternate row 3 (4, 5) times altogether; knit 1 row. Decrease 1 stitch on each Bed at beginning of next and every following 4th row 5 times altogether (52 (53, 55) stitches remain on each Bed). Knit 52 (52, 54) rows without shaping. (Slide is at right.)

Shape neck. Cast off 22 (23, 25) stitches on each Bed at beginning of next row. Decrease 1 stitch on each Bed at neck edge of next 12 rows (18 stitches remain on each Bed).

Shape shoulder. Cast off 9 stitches on each Bed at beginning of next row; knit 1 row. Cast off remaining 9 stitches on each Bed.

SLEEVES (both alike)

R.W. on ½. Setting $\frac{\text{R.B. N.5.}}{\text{F.B. N.5.}}$ 1 . 1 . 1 . 1 . 1 / 1 . 1 . 1 . 1 . 1 . 1 . 1

Cast on 61 (64, 67) stitches on R.B. and 62 (65, 68) stitches on F.B. in every other Needle rib (123 (129, 135) stitches altogether). Knit 2 circular rows.

Arrange Needles for pattern as follows:—

$\frac{\text{R.B.}}{\text{F.B.}}$ 1 1 . . . 1 1 1 . . . 1 1 1 . . . 1 1 / . . . 1 . . . . . 1 . . . . . 1 . . .

(Counting Needles in R.P. as stitches there are 121 (127, 133) stitches on R.B.) Set Row Counter at 0. **Reset Controls to $\overline{\text{N.8}}$ and knit 1 row. Reset Controls to $\overline{\text{N.8}}$ and knit 2 rows.** Repeat the last 3 rows from ** to ** throughout. Knit without shaping until 142 rows show on Row Counter.

Shape top (see Notes). Cast off 12 (14, 16) stitches on

continued on next page

Lady's Party Dress

R.B. at beginning of next 2 rows and 2 stitches on R.B. at beginning of next 4 rows.
Decrease 1 stitch on R.B. at beginning of next 50 (50, 52) rows. Cast off 4 stitches on R.B. at beginning of next 4 rows. Cast off remaining stitches.

CUFFS (2 alike)
Set up machine as for Bodice Front.
Cast on 15 stitches on each Bed in every Needle rib (30 stitches altogether). Set Row Counter at 0, reset controls to R.7. Knit 96 (101, 106) circular rows (192 R.7. (202, 212) rows show on Row Counter). Cast off.

NECK BORDER
Using R.B. only cast on 8 stitches. Set Control on N.7 and knit until border is long enough to go round neck. Cast off.

SKIRT (4 panels)
Set up machine as for Sleeves.
Cast on 46 (49, 52) stitches on R.B. and 47 (50, 53) stitches on F.B. in every other Needle rib (93 (99, 105) stitches altogether). Knit 2 circular rows. Arrange Needles for pattern as follows:—
R.B. 1 1 . . . 1 1 1 . . . 1 1 1 . . . 1 1
F.B. . . . 1 . . . . . 1 . . . . . 1 . . .
Counting Needles in R.P. as stitches there are 91 (97, 103) stitches on R.B.) Set Row Counter at 0. Working in pattern as given for Sleeves from ** to **, knit 289 (295, 301) rows without shaping. (Adjust length at this stage, if desired.) Cast off.

TO MAKE UP
Pin out sleeves and panels of skirt, stretching them sideways; press each piece with a hot iron over a damp cloth. Join the shoulder, side and sleeve seams; press. Set in sleeves; press. Sew cuffs to sleeve edges, as shown. Sew together skirt panels leaving 5 inches open in one seam; press. Gather skirt and sew it to bodice; press. Sew tape to fit waist. Sew neck border into position, fold in half and catch down on the wrong side; press. Sew in zip. Turn up 2 inches at lower edge. Give final pressing.

SLEEVELESS DRESS
Bodice Front, bodice Backs, neck border and skirt. Follow instructions for bodice front, bodice backs, neckborder and skirt of dress with three-quarter length sleeves.

YORKSHIRE KNITTING WOOL
save UP TO 10/- lb

DOUBLE KNITTING 10d. oz.
Super Fingering 3 & 4-ply 1/1 oz.

24 qualities in over 200 colours include Lustre, Fleck & Tweed D.K., Triple Knitting, Crepe D.K. and Triple Knitting, Chunky, Bri-Nylon D.K., 3 and 4-ply Baby Wools, Italian Mohair and Shetland Wools. *Guaranteed by money-back safeguard.*
Send 3d. stamp NOW for FREE shade samples to:- **KNITTING WOOLS (Bradford) LTD., Dept. K, 31, Sunbridge Road, Bradford, 1**

Please send me your FREE shade samples
Name.....
Address.....

LAKE-VIEW
WE DON'T SELL THE CHEAPEST WOOL
WE SIMPLY GIVE THE BEST VALUE FOR MONEY!

The Lake-view range includes:—
Chunky 2/8 per 2 oz. Hank—Fleck Double Knitting 1/4 per oz. Crepe Double Knitting 1/4 per oz.—Double Knitting 1/1 per oz.—3 and 4 ply 1/3 per oz. and Baby Wool 1/3 per oz.

There are many thousands of satisfied Lake-view knitters throughout the country, who enjoy the convenience and immediate service of Mail-Ordering their Lake-view wools. Remember—Lake-view Pure Knitting Wools are obtained direct from the Manufacturers—giving *you* EXCELLENT VALUE for MONEY.

All Surplus Wool can be returned for credit and a 'money back' guarantee is available if you are not completely satisfied.

Send today for our attractive shade card
Showing over 50 Shades and 8 types of wool.

I enclose 3d. postage stamp for *FREE* shade card and particulars of Lake-view knitting wools.
Name.....
Address.....
To F. W. BERWICK LTD., Bridgend Mills (Dept. A2), Haley Hill, Halifax, Yorks.

In case of difficulty in obtaining the wools write to:

Robin Wools:
Messrs. Robert Glew & Co. Ltd., Robin Mills, Idle, Bradford, 2, Yorks.

Listers Wools:
Knitting Wools Division, Messrs. Lister & Co. Limited, Manningham Mills, Bradford, 9, Yorks.

Hayfield Wools:
Messrs. John C. Horsfall & Sons Ltd., Hayfield Mills, Glusburn, Nr. Keighley, Yorkshire. or 92, Wardour Street, London, W.1.

Marriners Wools:
Messrs. R. V. Marriner Limited, Dept. B, Greengate Mills, Keighley, Yorkshire.

Emu Wools:
Messrs. Emu Wools Ltd., 13/14, Woodstock Street, London, W.1.

Sirdar Wools:
Miss J. M. Harrap, Messrs. Harrap Bros. Ltd., P.O. Box 31, Bective Mills, Alverthorpe, Wakefield, Yorks.

Ladyship Wools:
Messrs. Baldwin & Walker Ltd., West Croft Mills, Halifax, Yorkshire.

MODERN KNITTING is printed in England by G. F. Tomkin Ltd., 501-9 Grove Green Road, London, E.11, and published on the last Friday of every month for the Proprietors, Knitmaster Ltd., 18 Cavendish Square, London, W.1. Phone LANgham 9796. Subscription Rate, £1 5s. for 12 monthly issues or 12/6d. for 6 issues, post paid. For overseas territory apply local agents. MODERN KNITTING must not be retailed below the following prices: U.K., N. Ireland and Eire, 1/9d., Australia, 2/9d., New Zealand, 3/6d., South Africa, 27½ cents, U.S.A. and Canada, 50 cents.

© 1964 *Knitmaster Limited.*

QUALITY WOOLS

FROM ONLY **10D** PER OZ.

SAVE UP TO 1/9d. PER OZ. ON DIRECT-FROM-THE-MILL WOOLS

COMPARE OUR MILL PRICES

NEW MAISTEX Double Knitting, 95% wool, choice of 16 colours. 10d. per 1 oz. ball. — **only 10d.**

	SHOP PRICE	MILL PRICE
3 PLY WOOL/ANGORA. In 12 lovely pastel shades. (10 ozs. knits a twin set). 1/1½d. per ½ oz. ball.	2/-	**1/1½**
BRUSHED MOHAIR/ WOOL. Choice of 8 shades. Handles beautifully. 2/6d. per 1 oz. ball.	3/-	**2/6**
SUPER DOUBLE KNITTING. Pure cross bred wool. Superb range of 19 shades incl. new Tweed mixtures. 1/- per 1 oz. ball.	1/11	**1/-**
SUPER QUICKERKNIT. Finest quality Botany wool in 12 lovely shades. In 2 oz. hanks.	4/-	**2/4**

	SHOP PRICE	MILL PRICE
3 & 4 PLY SUPER FINGERING. 23 lovely shades and mothproofed. 1 oz. balls.	2/1	**1/4**

NYLONS Seam free micromesh **3/6** pair. 3 pairs **9/9.** Fully fashioned non-run micromesh **4/11** pair. 3 pairs **13/6.**

For free samples and knitting pattern offer, clip out this coupon and send to MADGE MAIS, Dept. MK1, Sovereign Mills, Batley, Yorkshire.

Enclose 6d. stamp for postage.

*Money back guarantee.

NAME

ADDRESS.....

.....

Dozens of free patterns
One free with every order

20,000 ways to make more spare-time money!

HUGE COLOUR CATALOGUE FREE Contains 20,000 top-quality items!

TRAFFORD SHOWS YOU HOW

Discover how fast, how easily you can earn extra money in your spare time. Send now right now—for Trafford's latest, fabulous, full-colour catalogue **ABSOLUTELY FREE!** Inside are 20,000 top-quality goods, including all your favourite brand names. *Every single one of these 20,000 items is guaranteed. Every single one can make or save you money.* **Why wait?** Join the thousands of satisfied agents who are at this very moment making extra money for themselves. **Post the coupon today.**

2/- in the £ Commission. Show the catalogue to all your friends. On every order, yours included, *you make 10% clear profit!* All that money for just a few minutes a week of your spare time!

See before you buy. Orders despatched instantly. All sent on absolutely free approval! *Not a penny to pay until you're 100% satisfied.* Trafford supply stationery, pay all postal expenses.

Easy Terms. Just 1/- in the £ for 20 weeks 38 weeks for some items *and no extra charge for credit.* Fantastic but true!

2 years to pay for big items such as bedroom suites and washing machines.

Send away now for *your* copy of Trafford's magnificent catalogue. Prove how easily you, too, will earn extra money with the fabulous Trafford range. 20,000 different things—fantastic! And there are hundreds of famous brand names—names you and your customers can trust implicitly.

POST COUPON TODAY
To: TRAFFORD . DEPT EA113 MANCHESTER X

TRAFFORD
BRITAIN'S FRIENDLY FIRESIDE STORE

To: TRAFFORD. DEPT. EA113 MANCHESTER X

Please send FREE and without any obligation my 20,000 item Autumn/Winter Catalogue and more exciting details.

MR/MRS/MISS .....
(BLOCK CAPITALS PLEASE) I AM NOT UNDER 21

ADDRESS.....
(GIVE HOUSE NUMBER)

.....

..... COUNTY.....

ON THE MARK!

NOW YOU HAVE GRADUATED!

YOU NEED THE LATEST, THE BEST AND THE FASTEST, 1 KNOB CONTROL

TWINMATIC

by KNITMASTER

THE COMPANY YOU CAN ALWAYS TRUST

With this latest double bed machine you can fashion all the knitting needs of the whole family—***and knit for profit too.*** A single knob control gives simple operation in swift, easy movements.

The Twinmatic is an all-metal unit by KNITMASTER—the symbol of superiority.

OVER A MILLION SATISFIED CUSTOMERS

and remember

- ★ Monthly Magazine and Large Range of Individual Patterns.
- ★ Hire Purchase Available, Best of Easy Terms.
- ★ After Sales Service Guarantee.
- ★ **FREE TUITION.**

WORKS WONDERS IN WOOL!

A Symphony in "Double knit"...
one of the countless designs which can only be produced on a machine of this calibre.
This garment was knitted so inexpensively—yet so quickly on the wonderful **TWINMATIC.**

POST NOW

To Knitmaster Ltd., 18 CAVENDISH SQUARE, LONDON, W.1. Telephone: LANgham 9791 (10 lines)

Please post FREE colour brochure giving full details of all Knitmaster Knitting Machines

Name.....

Address..... MK.11

KNITMASTER—*THE NAME YOU CAN ALWAYS TRUST*